


Double locking switch circuit

CIRCUIT DESCRIPTION

The double locking switch is built in the door lock assembly.
This switch detects the set/unset conditions of the double lock.

WIRING DIAGRAM

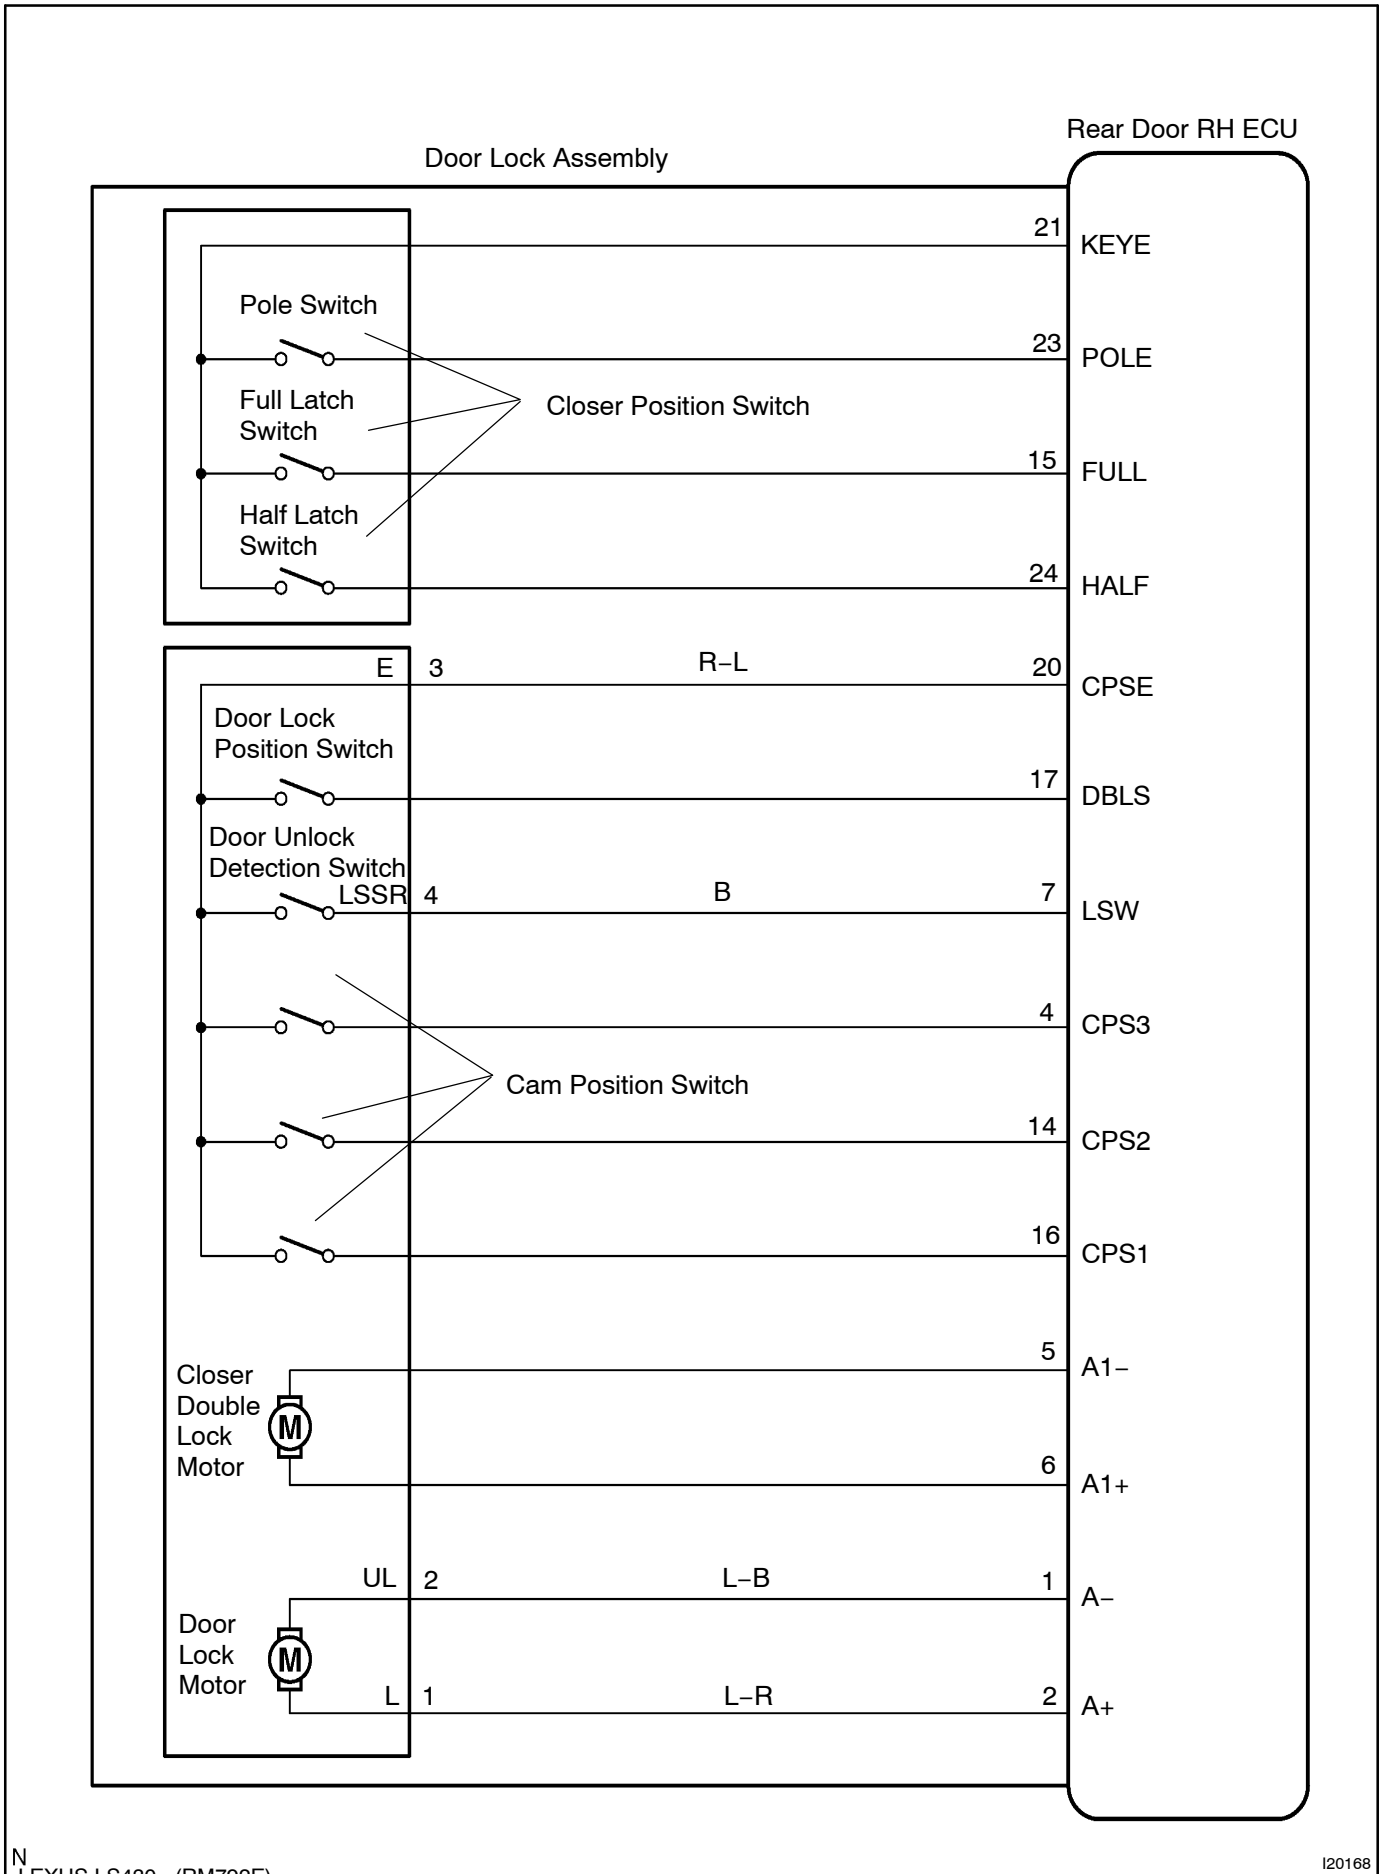

INSPECTION PROCEDURE

HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

1 Check double locking switch using LEXUS hand-held tester.

PREPARATION:

Connect the LEXUS hand-held tester to the DLC3.

CHECK:

Check the double locking switch using DATA LIST.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-139).

NG

2 Check double locking switch (See page BE-170).

NG

Replace door lock assembly.

OK

3 Check wireharness and connector between double locking switch and rear door RH ECU (See page N-35).

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-139).