


## Trigger switch circuit

### CIRCUIT DESCRIPTION

The trigger switch is built in the outside handle.

The rear right door ECU is detects the condition of the trigger switch.

### WIRING DIAGRAM

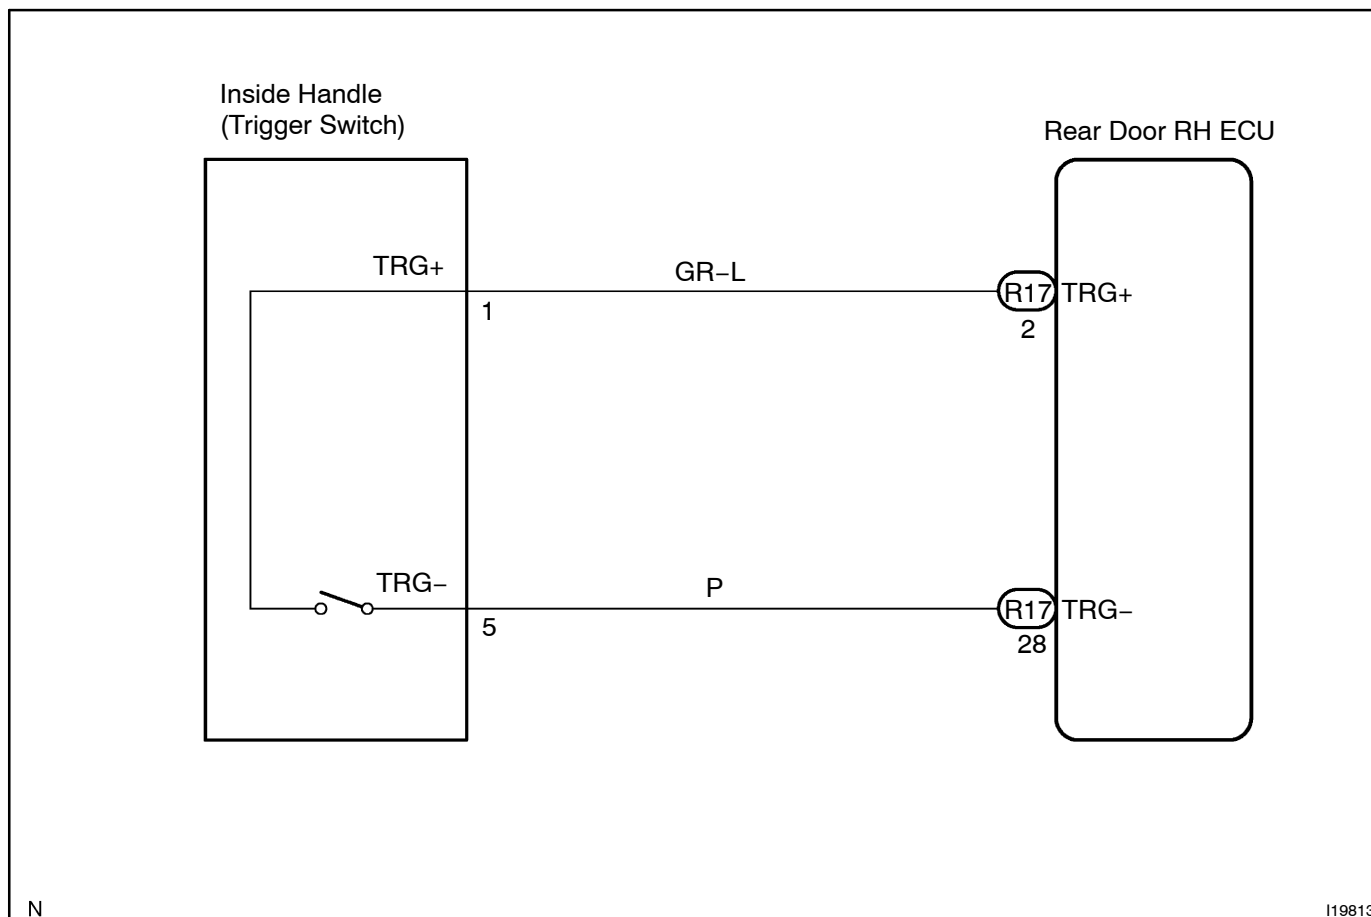

**INSPECTION PROCEDURE****HINT:**

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

**1** Check trigger switch using LEXUS hand-held tester.

**PREPARATION:**

Connect the LEXUS hand-held tester to DLC3.

**CHECK:**

Check the trigger switch using DATA LIST.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-1339).

NG

**2** Check wireharness and connector between trigger switch and rear door RH ECU (See page N-35).

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-1339).