

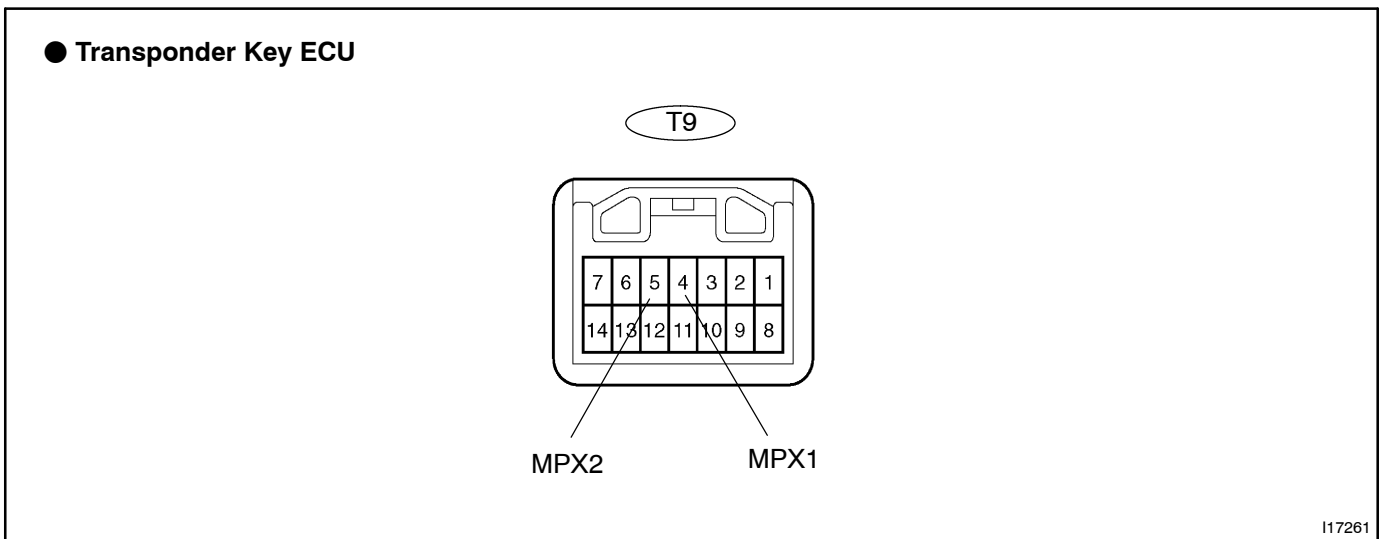
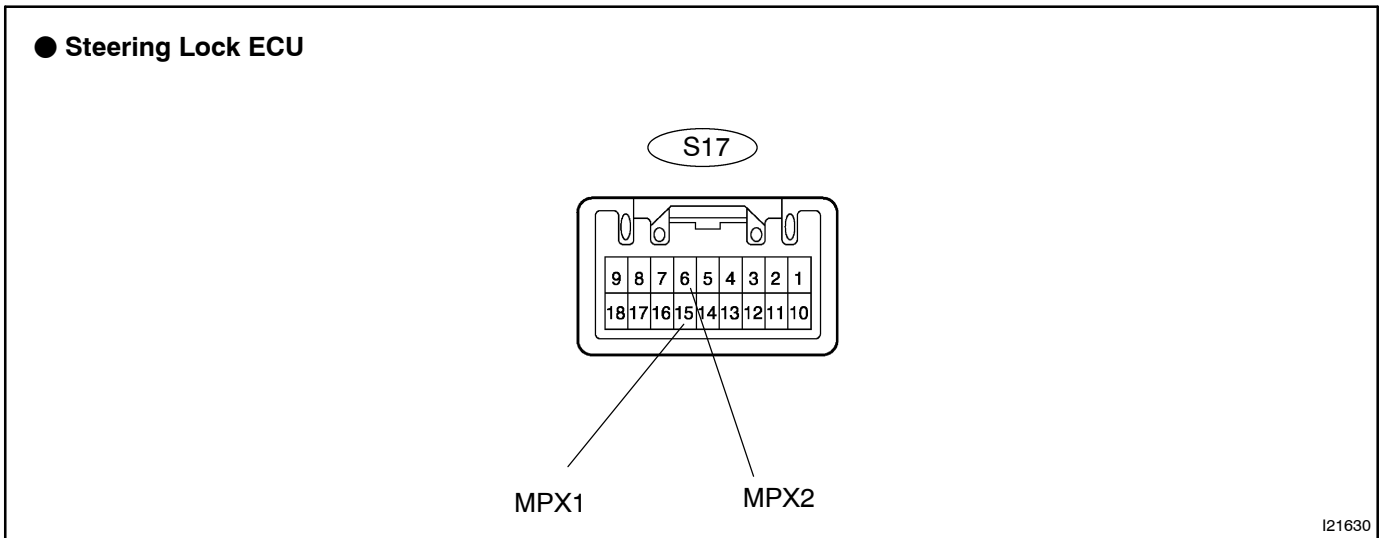


# TERMINALS OF ECU

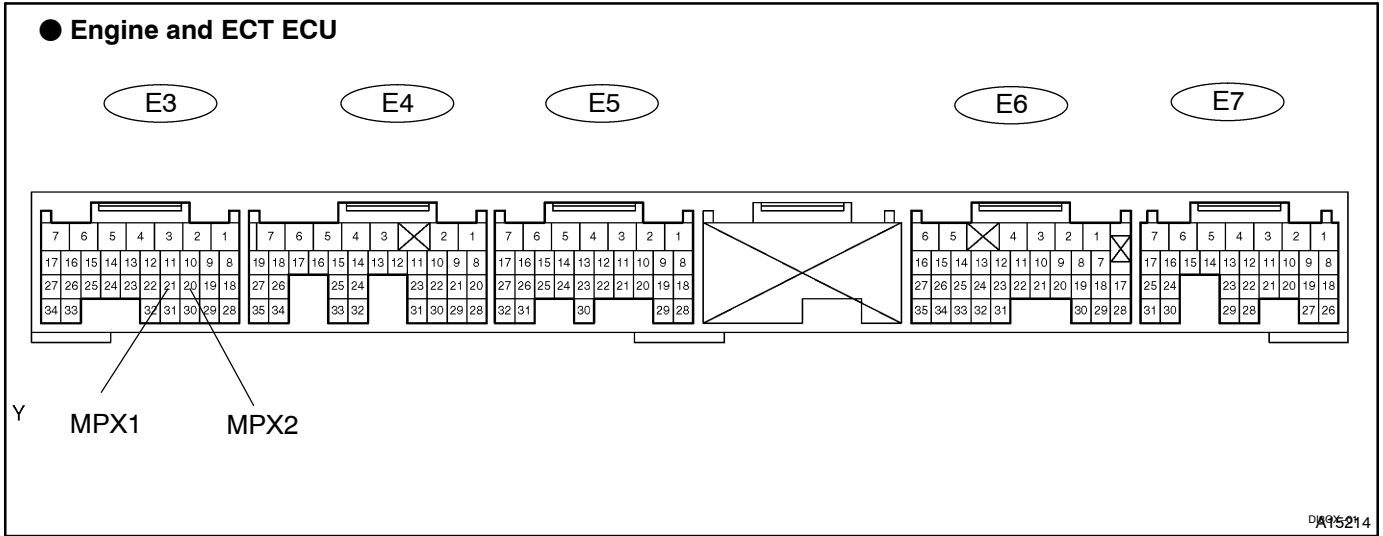

● Combination Meter

C12

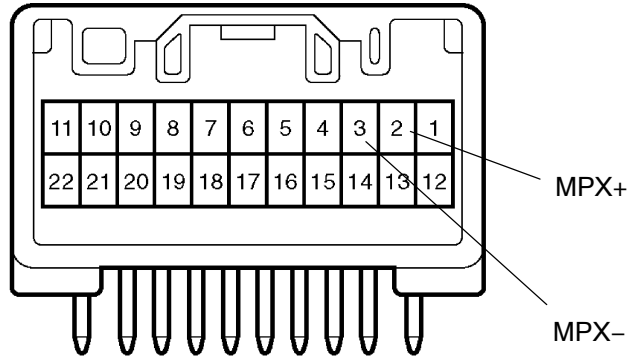


N

I18948

● Moon Roof Control ECU

M4

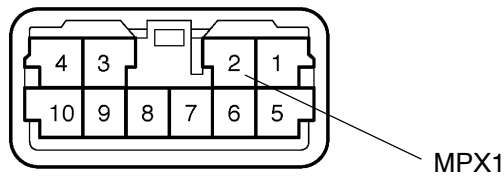


I04611

● Driver side J/B ECU

D2


D4

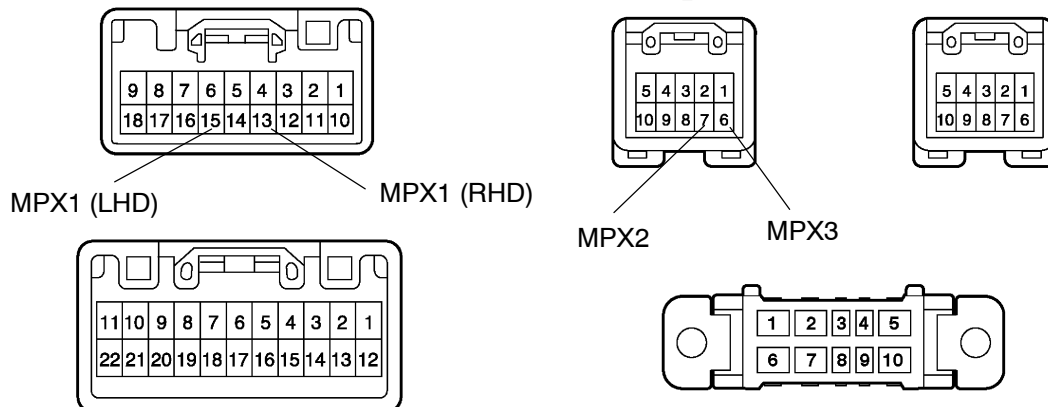

T


I20436

● Passenger Side J/B ECU

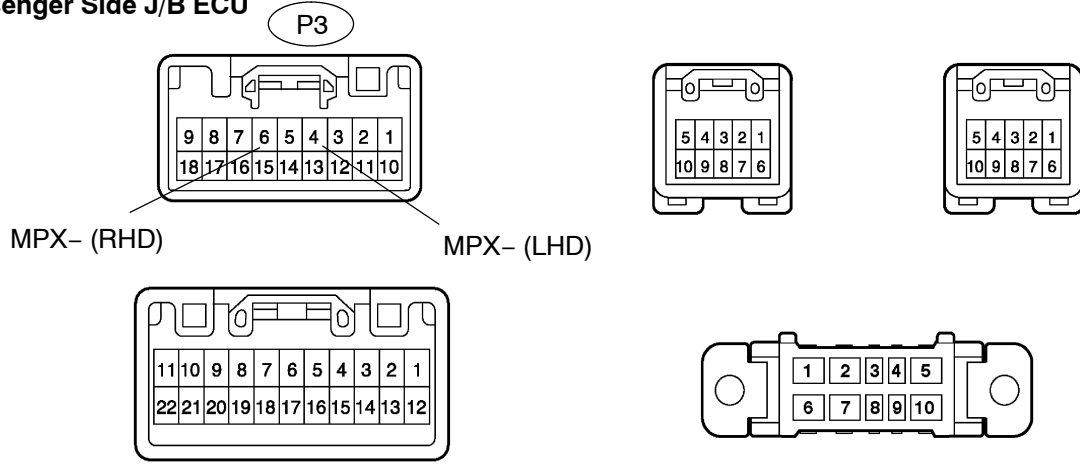


I20436

● Luggage Room J/B ECU

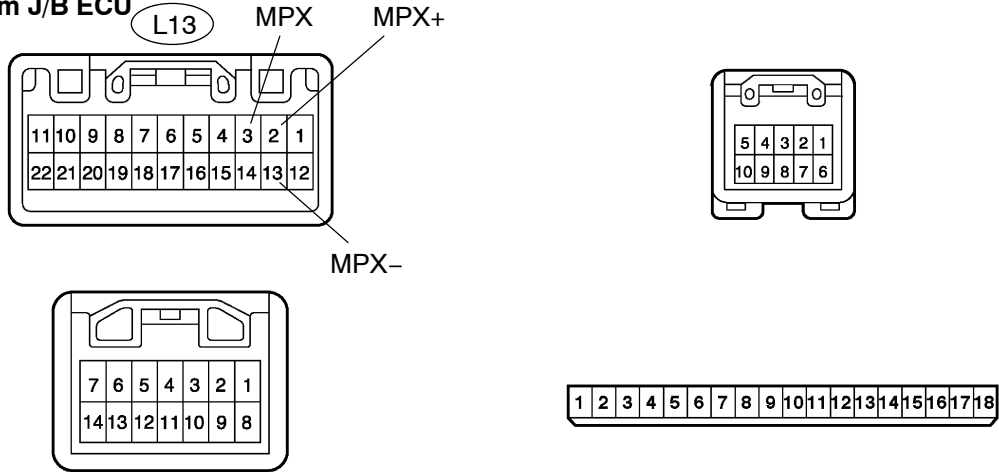

I20437


● Front Light ECU

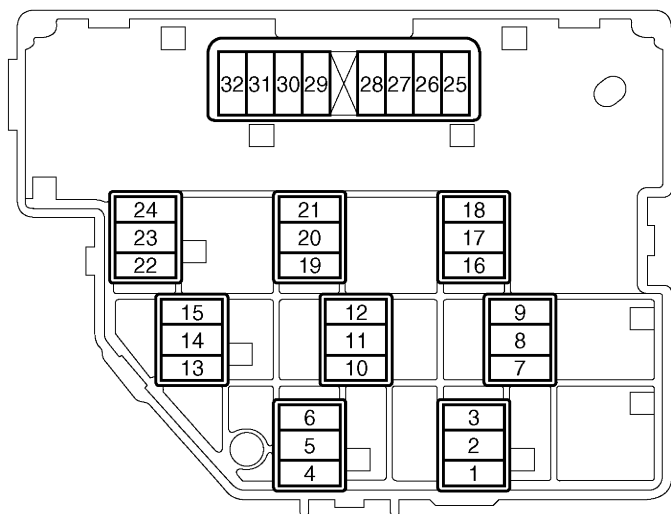

N

I20200


● Driver Door ECU

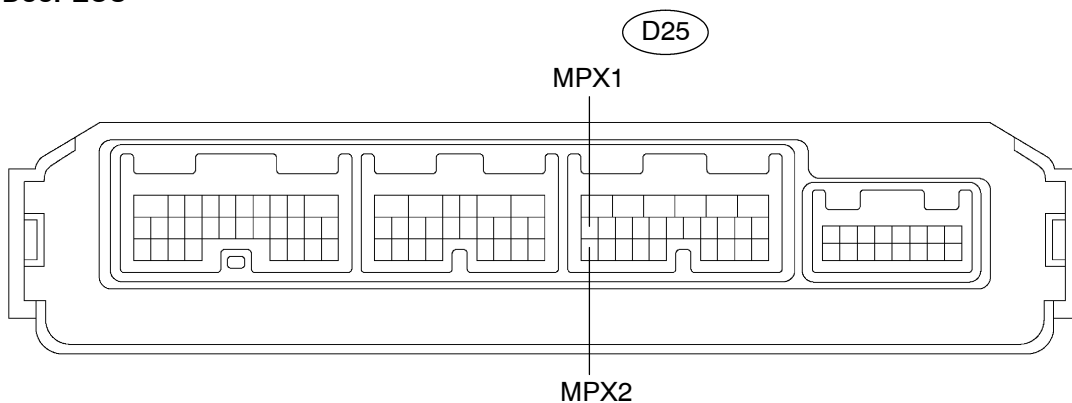

N

I19947


● Front Passenger Door ECU

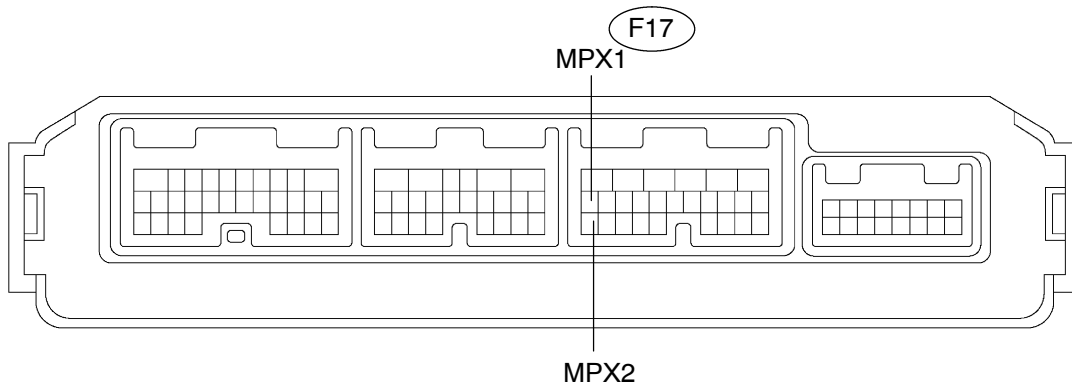

N

I19947


● Rear Door LH ECU

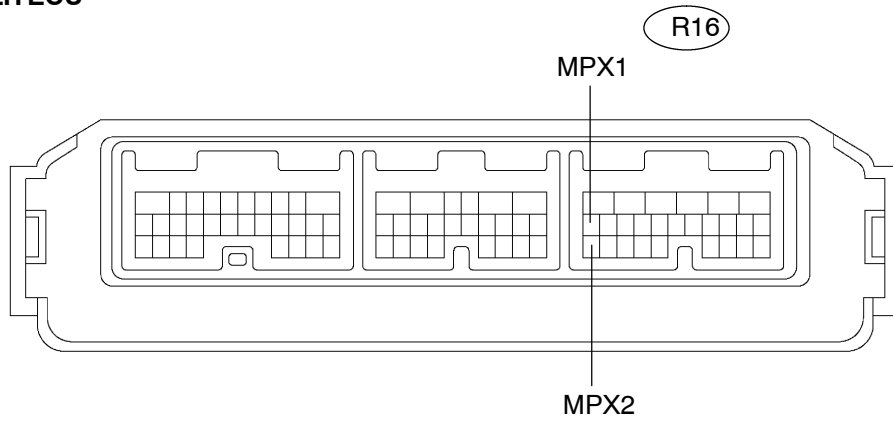

N

I20097


● Rear Door RH ECU

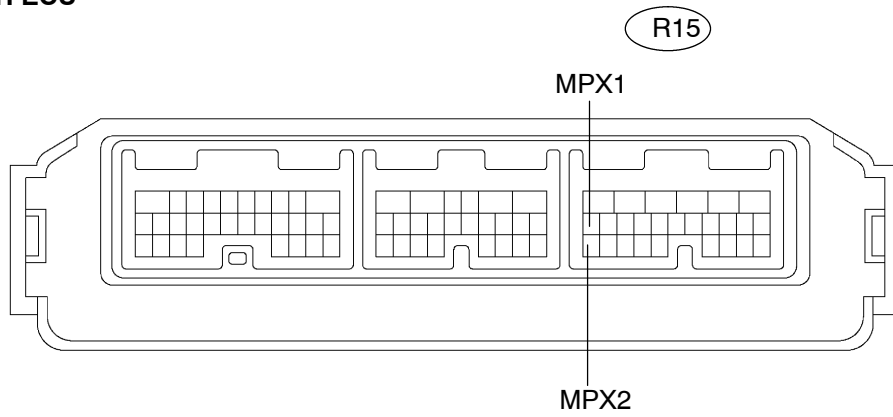

N

I20097


● Theft Deterrent ECU

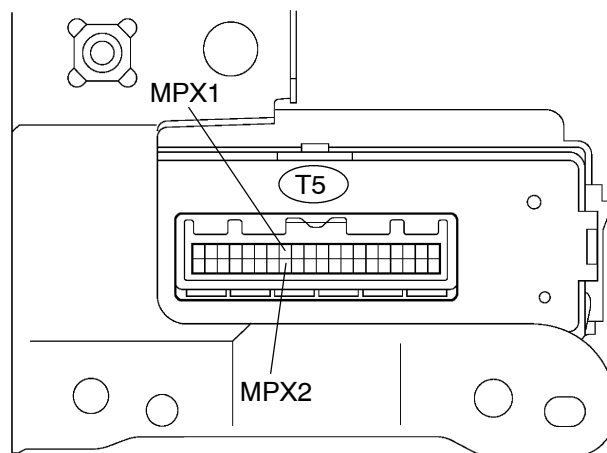

T

I20093


● Driver Seat ECU

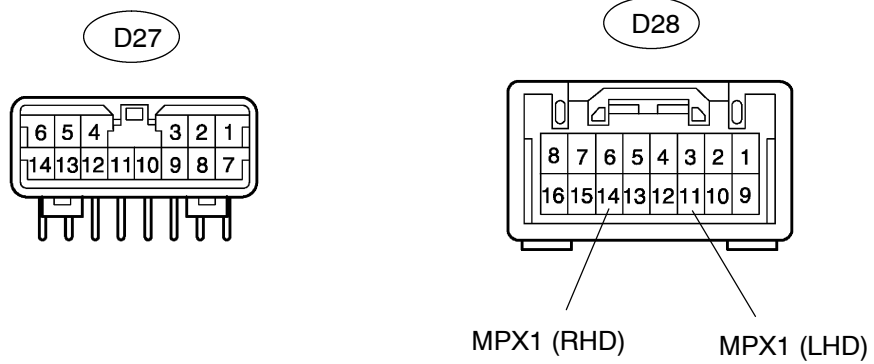

T

I20417


● Rear RH Seat ECU

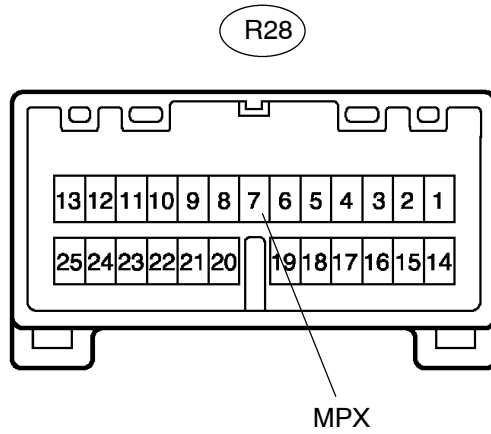

T

I20398


● Rear LH Seat ECU

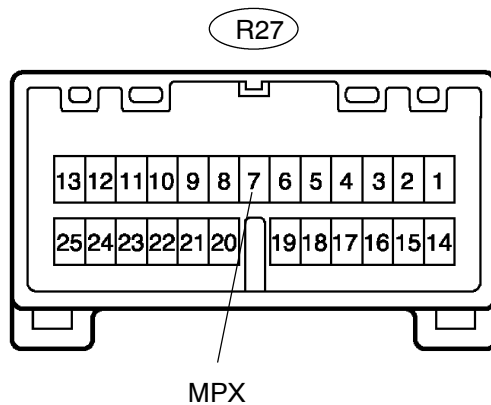

T

I20398


● Combination Switch

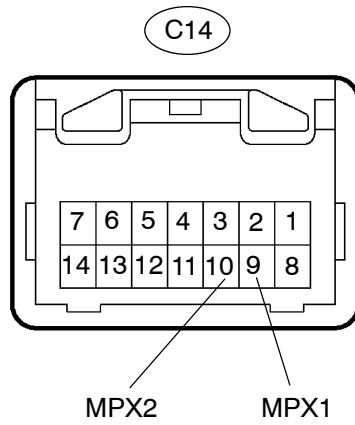

N

I13684


● Steering Pad Switch

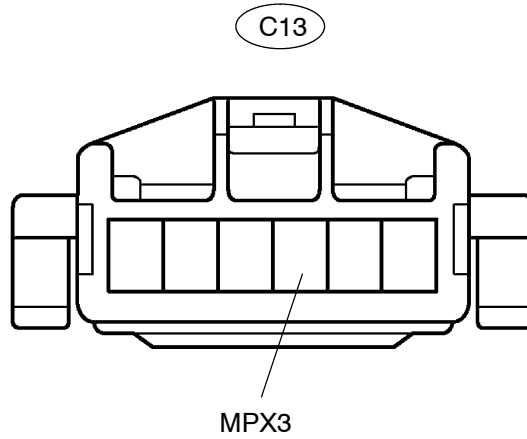

T

I20412


● Clearance Soner ECU

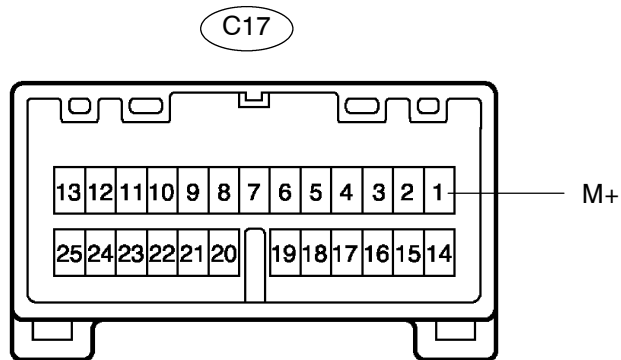

T

I20398


● Rain Sensor

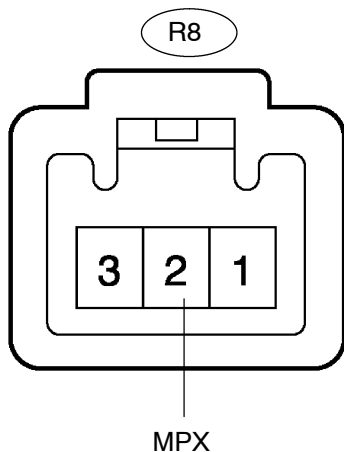

T

I20409

● Rear Seat Control Switch

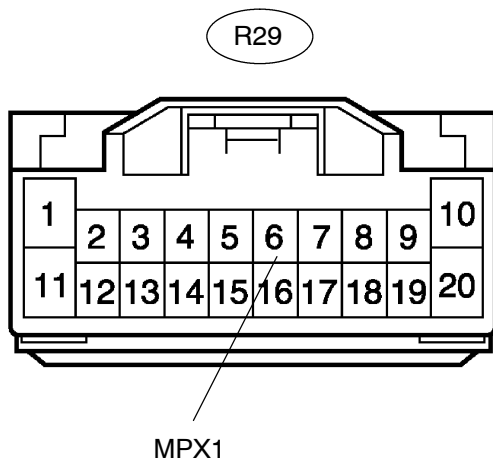


T

I20394




● Overhead J/B

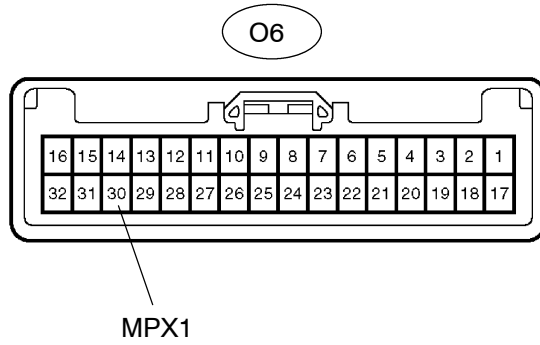

N

I20778


● Airbag Sensor Assembly

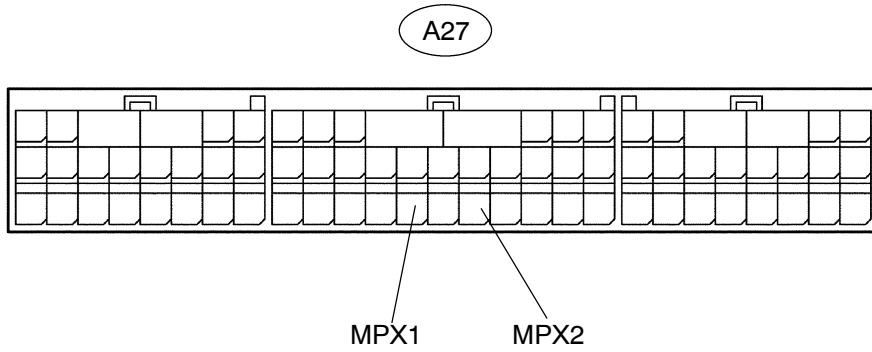

P

H16828


● Radio and Player

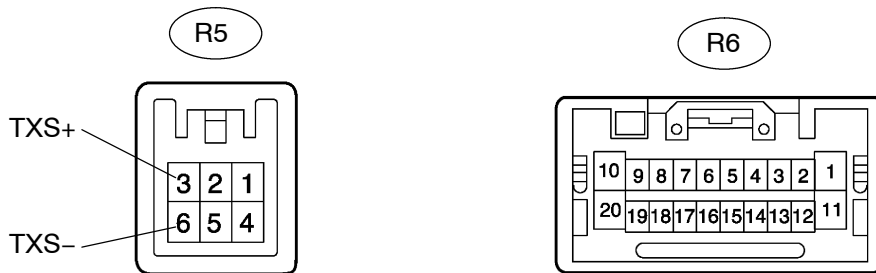

T


I20415

● Power Tilt and Power Telescopic

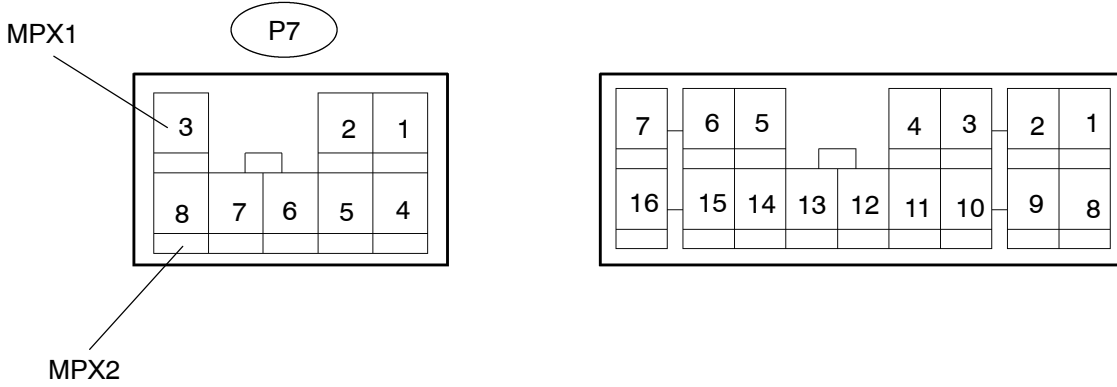


F05341

● Skid Control ECU

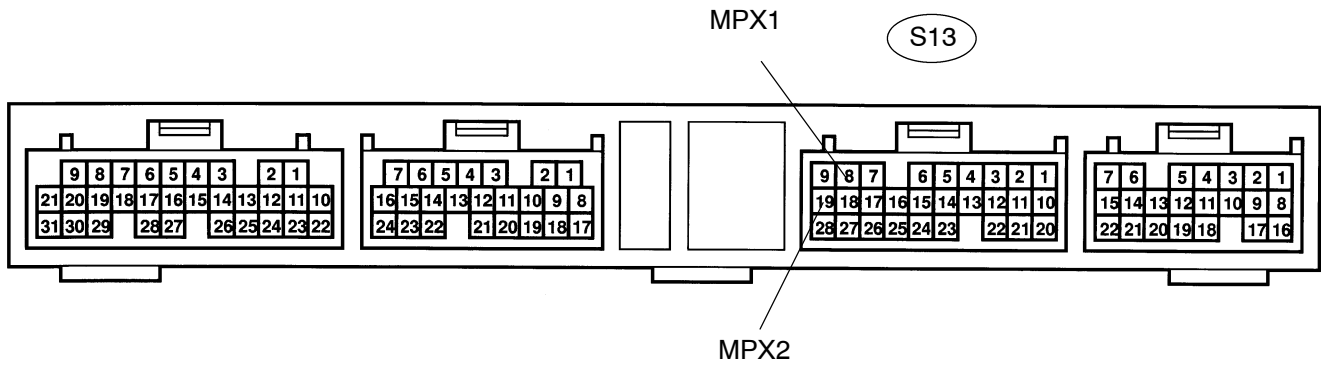


F02094

● A/C ECU

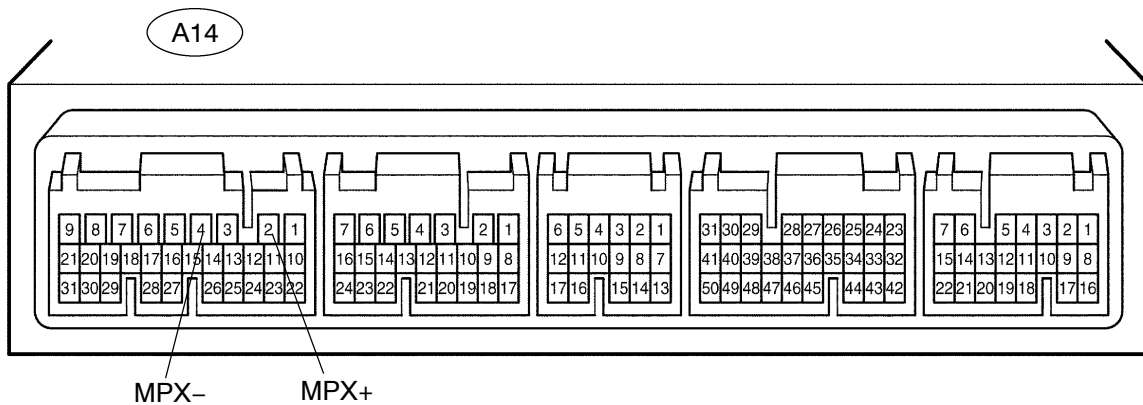

I20955

● Gateway ECU

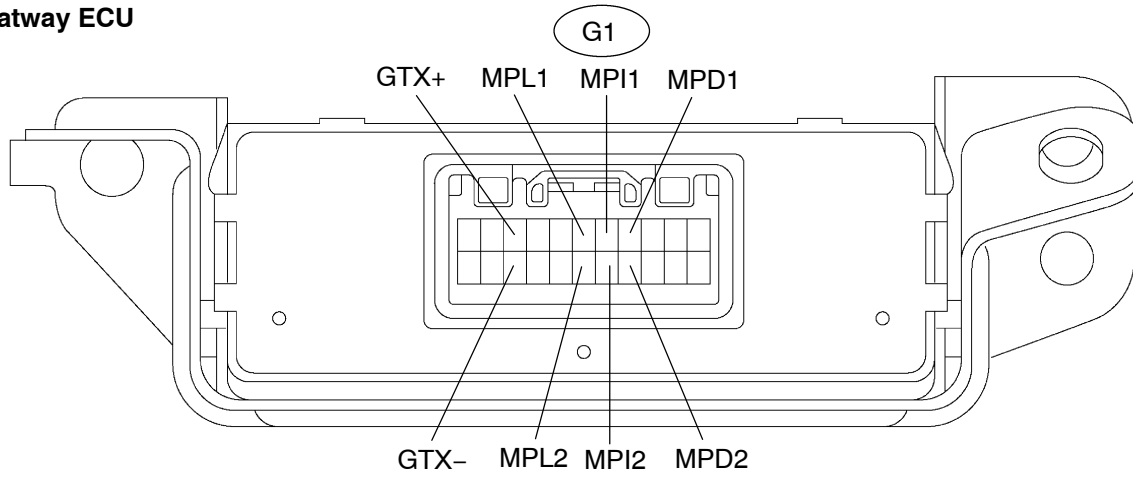

N

I20094