

PROBLEM SYMPTOMS TABLE

HINT:

Related systems are mentioned in (- system).

LIGHTING SYSTEM:

System	Refer to system	See page
Automatic light control system (Headlight is normal)	Driver side J/B control system (Luggage room J/B control system) (Combination meter system) (Front light control system) (LEXUS navigation system)	DI-1003 - - - -
Back-up light system	Driver side J/B control system (Luggage room J/B control system) (Automatic transmission system)	DI-1003 - -
Front fog light system (Headlight is normal)	Driver side J/B control system (Combination switch control system) (Front light control system)	DI-1003 - -
Front parking light	Driver side J/B control system (Front light control system)	DI-1003 -
Front clearance light	Driver side J/B control system (Front light control system)	DI-1003 -
Headlight beam level control system (Headlight is normal)	Passenger side J/B control system (Combination meter system)	DI-1065 -
Headlight system (Hi beam or Flash)	Driver side J/B control system (Combination switch control system) (Front light control system)	DI-1003 - -
Headlight system (Low beam)	Driver side J/B control system (Combination switch control system)	DI-1003 -
License plate light	Driver side J/B control system (Luggage room J/B control system)	DI-1003 -
Light auto turn off system (Headlight is normal)	Driver side J/B control system (Steering lock system (w/ Smart key system)) (Engine immobiliser system (w/o Smart key system)) (Front light control system) (Driver door control system) (Theft deterrent system)	DI-1003 - - - - -
Rear fog light system	Driver side J/B control system (Luggage room J/B control system)	DI-1003 -
Side marker light	Driver side J/B control system (Front light control system)	DI-1003 -
Stop light system	Driver side J/B control system (Luggage room J/B control system)	DI-1003 -
Taillight system	Driver side J/B system (Combination switch control system) (Luggage room J/B control system)	DI-1003 - -
Turn signal and hazard warning system	Driver side J/B control system (Combination switch control system) (Luggage room J/B control system)	DI-1003 - -

ILLUMINATION SYSTEM:

System	Refer to system	See page
Buckle illumination	Driver side J/B control system (Driver belt) Passenger side J/B control system (Passenger belt) Luggage room J/B control system (Rear belt)	DI-1003 DI-1065 DI-1104

Door courtesy light	Passenger door control system (Driver door control system) (Rear left door control system) (Rear right door control system)	DI-1263 – – –
Illumination system (switch illuminations, combination meter illumination)	Driver side J/B control system	DI-1003 –
Illuminated entry system (Illumination is normal)	Driver side J/B control system Passenger side J/B control system (Driver door control system) (Passenger door control system) (Rear left door control system) (Rear right door control system)	DI-1003 DI-1065 – – – –
Illumination and interior light system (Vanity light, interior light, front personal light, step light, ignition key illumination)	Passenger side J/B control system	DI-1065
Outer step light does not light up (in outer mirror)	Passenger side J/B ECU (Driver door control system) (Passenger door control system)	DI-1065 – –
Luggage compartment light	Luggage room J/B control system	DI-1104

WINDOW, DOOR LOCK AND SECURITY SYSTEM:

System	Refer to system	See page
Door lock system	Theft deterrent system (Driver door control system (Driver side)) (Passenger door control system (Passenger side)) (Rear left door control system (Rear left side)) (Rear right door control system (Rear right side))	DI-792 – – – –
Door lock system (Key confinement prevention function)	Theft deterrent system (Steering lock control system (w/ Smart key system)) (Engine immobiliser system (w/o Smart key system)) (Driver door control system (Driver side)) (Passenger door control system (Passenger side)) (Rear left door control system (Rear left side)) (Rear right door control system (Rear right side))	DI-792 – – – – – –
Door closer system	Driver door control system (Driver side) Passenger door control system (Passenger side) Rear left door control system (Rear left side) Rear right door control system (Rear right side)	DI-1188 DI-1263 DI-1330 DI-1386
Double locking system	Theft deterrent system Driver door control system (Driver side) Passenger door control system (Passenger side) Rear left door control system (Rear left side) Rear right door control system (Rear right side)	DI-792 – – – –
Engine immobiliser system	Engine immobiliser system (w/o smart key system) Steering lock system (w/ smart key system) (Engine system)	DI-900 DI-873 –
Luggage compartment door opener system	Luggage room J/B control system (Driver side J/B control system) (Theft deterrent system)	DI-1104 – –
Luggage compartment door closer system	Luggage room J/B control system Driver side J/B control system (Theft deterrent system)	DI-1104 DI-1003 –

DIAGNOSTICS - GATEWAY SYSTEM

Power window control system	Driver door control system (Passenger door control system) (Rear left door control system) (Rear right door control system)	DI-1188 - - -
Smart key system	Theft deterrent system Luggage room J/B control system (Driver door control system) (Passenger door control system) (Rear left door control system) (Rear right door control system) (Steering lock system) (Combination meter system)	DI-792 DI-1104 - - - - - -
Steering lock system	Steering lock system (Engine system) (Theft deterrent system)	DI-873 - -
Theft deterrent system (Door lock system is normal)	Theft deterrent system (Driver side J/B control system) (Luggage room J/B control system) (Driver door control system) (Passenger door control system)	DI-792 - - - -
Wireless door lock control system (Door lock system is normal)	Theft deterrent system (Luggage room J/B control system) (Moon roof system) (Driver door control system) (Passenger door control system) (Rear left door control system) (Rear right door control system)	DI-792 - - - - - -

DRIVER INFORMATION SYSTEMS:

System	Refer to system	See page
Combination meter (Gauge, Warning light, Indicator light, Buzzer)	Combination meter system	DI-930
Clock	A/C system (Combination meter system)	DI-1755 -
Multi information Display	Combination meter system (Steering pad switch system)	DI-930 -
Key remainder warning system	Combination meter system (Steering lock control system (w/ Smart key system)) (Engine immobiliser system (w/o Smart key system)) (Driver door control system) (Passenger door control system) (Rear left door control system) (Rear right door control system)	DI-930 - - - - - -
LEXUS park assist system	LEXUS park assist system Rain sensor system	DI-1721 DI-981
LEXUS navigation system	LEXUS navigation system (Steering pad switch system) (Passenger side J/B control system)	DI-1598 - -
Seat belt warning system	Combination meter system (Driver side J/B control system) (Passenger side J/B control system)	DI-930 - -
Driving position memory system	Power seat control system (Driver door control system) (Engine system)	DI-715 - -

MIRROR SYSTEM:

System	Refer to system	See page
Automatic glare-resistant EC mirror system	Driver door control system (Passenger door control system)	DI-1188 -
Remote control mirror system	Driver door control system (Driver side J/B control system) (Passenger door control system) (Engine system)	DI-1188 - - -
Retract mirror system	Driver door control system (Driver side J/B control system) (Passenger door control system) (Engine system)	DI-1188 - - -
Mirror heater system	Driver door control system (Passenger door control system) (A/C system)	DI-1188 - -

SEAT AND SEAT BELT SYSTEM:

System	Refer to system	See page
Driver's power seat system	Power seat control system	DI-715
Rear passenger's power seat system	Rear seat switch system Rear right seat control system Rear left seat control system (Luggage room J/B control system)	DI-782 DI-759 DI-736 -
Seat heater system (Rear)	Rear seat switch system Seat heater system	DI-782 BE-196
Vibration seat system	Rear right seat control system Rear left seat control system	DI-759 DI-736
Power shoulder belt anchorage system	Driver door control system (Passenger door control system) (Driver side J/B control system) (Passenger side J/B control system)	DI-1188 - - -
Driving position memory system	Power seat control system (Tilt and telescopic steering system)	DI-715 -

AIR CONDITIONING SYSTEM:

System	Refer to system	See page
Air conditioning system	Air conditioning system (Engine system)	DI-1755 -
Rear air conditioning system	Air conditioning system (Engine system) (Luggage room J/B control system)	DI-1755 - -

OTHER SYSTEMS:

System	Refer to system	See page
Cellular mobile telephone	LEXUS navigation system (Steering pad switch system)	DI-1598 -
Cruise control system	Cruise control system	DI-855
Fuel lid opener system	Driver side J/B control system (Luggage room J/B control system)	DI-1003 -
Fuel cut system when colliding	Engine system (SRS system)	DI-1 -
Headlight cleaner system	Driver side J/B control system	DI-1003
Horn system	Front light control system	DI-1161
Radio and player system	Audio system (Steering pad switch system)	DI-1549 -
Rear sunshade system	(Passenger side J/B control system) (Luggage room J/B control system)	- -
Rear window defogger system	Air conditioning system	
Wiper and washer system	Driver side J/B control system Front light control system (Combination switch control system) (Passenger side J/B control system) (Engine system) (Combination switch control system)	DI-1003 DI-1161 - - - -
Wiper and washer system (Automatic wiper system)	Passenger side J/B control system Rain sensor system (Combination switch) (Engine system)	DI-1065 DI-981 - -