

<b>DTC</b>	<b>B1262</b>	<b>A/C ECU communication stop</b>
------------	--------------	-----------------------------------

## CIRCUIT DESCRIPTION

This DTC is output when communication stops between the A/C control ECU and the gateway ECU.

DTC No.	DTC Detecting Condition	Trouble Area
B1262	No communication from ECU for more than 10 seconds.	<ul style="list-style-type: none"> <li>• A/C control ECU</li> <li>• Wire harness</li> </ul>

## WIRING DIAGRAM

See [page DI-1504](#).

<b>1</b>	<b>Check wire harness.</b>
----------	----------------------------


### PREPARATION:

Pull out the ECU connectors mentioned below.

Wire harness side connector of ECU	Terminal
A/C ECU - Engine and ECT ECU	MPX+ (A14-2) - MPX2 (E3-20)
A/C ECU - Integration control panel (w/o LEXUS navigation system)	MPX- (A14-4) - MPX+ (C6-3)
A/C ECU - Gateway ECU (w/ LEXUS navigation system)	MPX- (A14-4) - MPI1 (G1-5)

### CHECK:

Check continuity of the wire harness between the connectors.

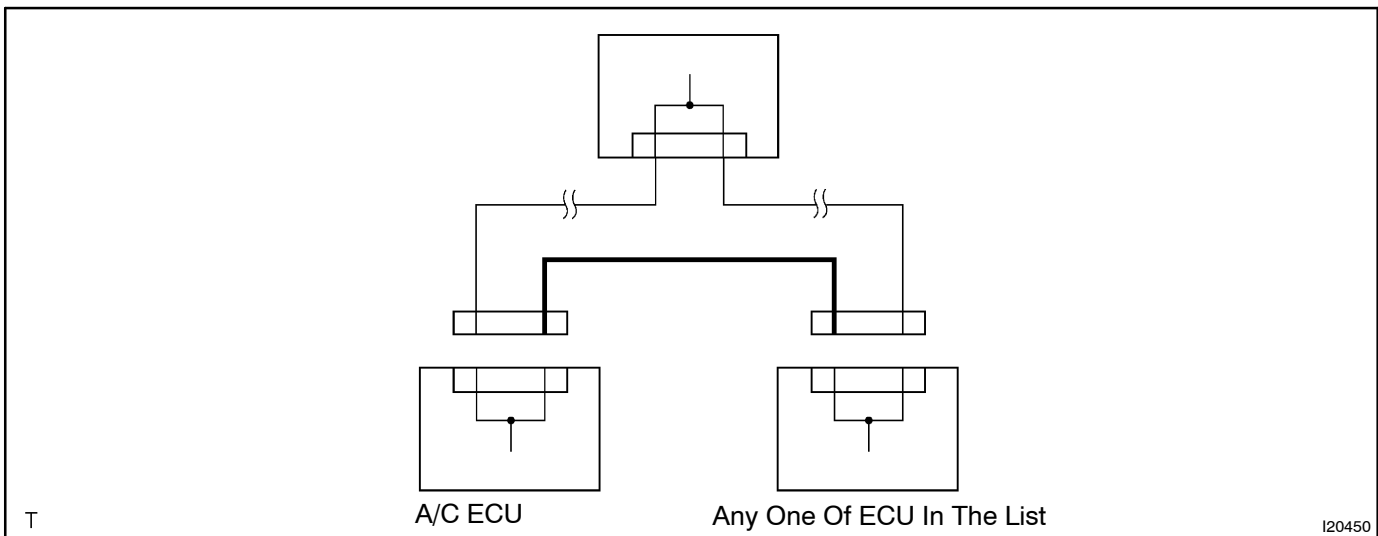

### OK:

**There is a continuity between the connectors.**

### HINT:

If there is OPEN in any wire harness, please repair it.

**NG**

**Repair or replace wire harness.**

**OK**

Replace A/C ECU (See page N-35).