

DTC	B1278	Combination switch ECU communication stop
------------	--------------	--

CIRCUIT DESCRIPTION

This DTC is output when communication stops between the combination switch ECU and the gateway ECU.

DTC No.	DTC Detecting Condition	Trouble Area
B1278	No communication from combination switch ECU for more than 10 seconds.	<ul style="list-style-type: none"> • Combination switch ECU • Wire harness

WIRING DIAGRAM

See [page DI-1533](#)

INSPECTION PROCEDURE

1	Check wire harness.
----------	----------------------------


PREPARATION:

Pull out the ECU connectors mentioned below.

Wire harness side connector of ECU	Terminal
Combination switch - Power tilt and power telescopic ECU	MPX1 (C14-9) - MPX2 (P7-8)
Combination switch - Luggage room J/B ECU	MPX2 (C14-10) - MPX+ (L13-2)

CHECK:

Check continuity of the wire harness between the connectors.

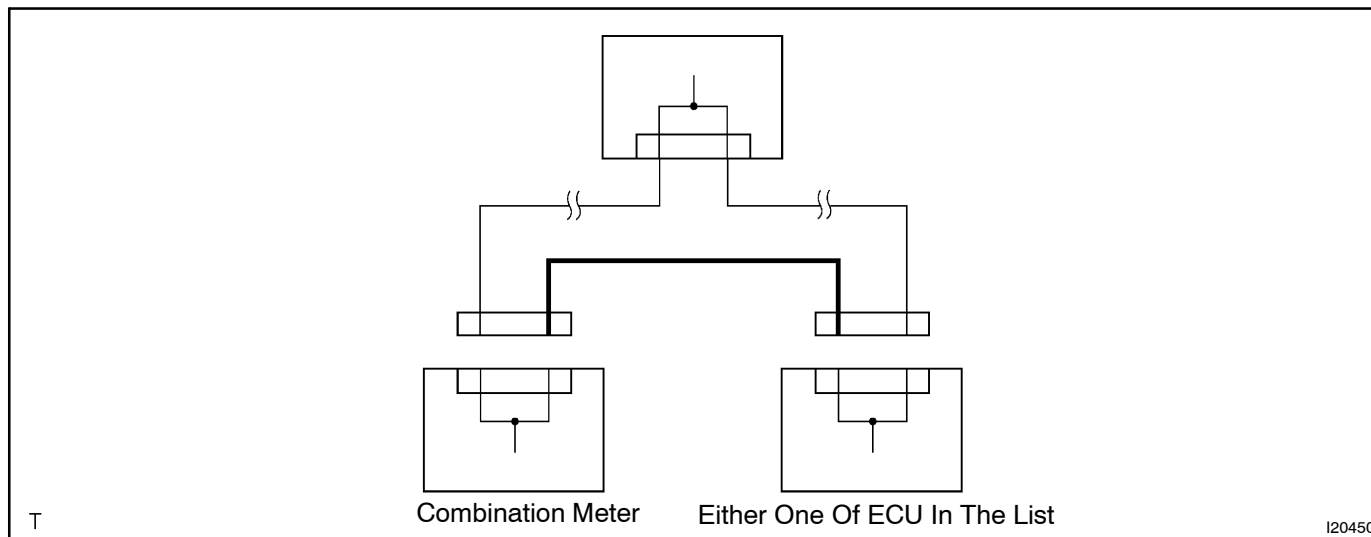

OK:


There is a continuity between the connectors.

HINT:

If there is OPEN in any wire harness, please repair it.



Repair or replace wire harness.

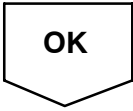

Replace combination switch ECU (See page IN-35).