

<b>DTC</b>	<b>B1298</b>	<b>Rear RH seat ECU communication stop</b>
------------	--------------	--

## CIRCUIT DESCRIPTION

This DTC is output when communication stops between the rear RH seat ECU and the gateway ECU.

DTC No.	DTC Detecting Condition	Trouble Area
B1298	No communication from rear RH seat ECU for more than 10 seconds.	<ul style="list-style-type: none"> <li>• Rear RH seat ECU</li> <li>• Wire harness</li> </ul>

## WIRING DIAGRAM

See [page DI-1482](#).

## INSPECTION PROCEDURE

<b>1</b>	<b>Check wire harness.</b>
----------	----------------------------

### PREPARATION:

Pull out the ECU connectors mentioned below.

### LHD:


Wire harness side connector of ECU	Terminal
Rear RH seat ECU - Gateway ECU	MPX (P28-7) - MPD2 (G1-15)

### RHD:

Wire harness side connector of ECU	Terminal
Rear RH seat ECU - Transponder key ECU (w/o Smart key system)	MPX (P28-7) - MPX1 (T9-4)
Rear RH seat ECU - Steering lock ECU (w/ Smart key system)	MPX (P28-7) - MPX1 (S17-15)

### CHECK:

Check continuity of the wire harness between the connectors.

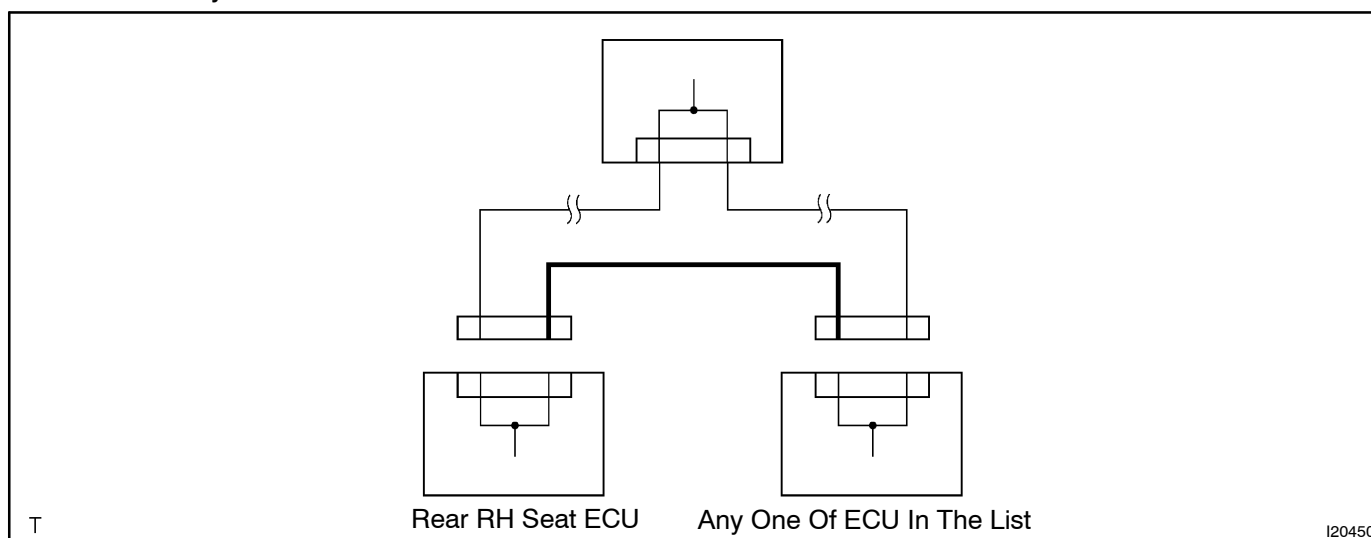

### OK:


**There is a continuity between the connectors.**

### HINT:

If there is OPEN in any wire harness, please repair it.



Repair or replace wire harness.

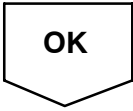

Replace rear RH seat ECU (See page IN-35).