

PROBLEM SYMPTOMS TABLE

Flowchart No.	Symptom	See page
1	Certain speaker only does not sound.	DI-1576
2	Radio and player cannot be powered.	DI-1578
3	Cassette Tape and CD does not sound. (Radio sound can be heard.)	DI-1579
4	Radio does not sound. (Cassette tape and CD sound can be heard.)	DI-1581
5	Sound of radio, cassette tape or CD cannot be heard, although radio is turned ON.	DI-1583
6	Radio broadcast cannot be received. (Bad reception.)	DI-1585
7	Cassette tape cannot be inserted.	DI-1587
8	Cassette tape cannot be ejected.	DI-1588
9	CD cannot be inserted.	DI-1589
10	CD cannot be ejected.	DI-1590
11	No AM, FM or CD screen is displayed.	DI-1591
12	Turning Light Control switch "TAIL" does not light up radio switches.	DI-1593
13	A audio system cannot be operated with Steering pad switch.	DI-1594
14	A audio system cannot be operated with air conditioner switches on Rear Controller.	DI-1597