

2. Radio and player cannot be powered.

INSPECTION PROCEDURE

1 Check radio and player.

PREPARATION:

Disconnect the radio and player connector.

CHECK:

Check the voltage of terminal +B.

OK:

+B: 10 - 14 V

CHECK:

Check the voltage of terminal ACC when the ignition switch is in ACC or ON position.

OK:

ACC: 10 - 14 V

CHECK:

Check continuity at terminal GND.

OK:

GND: Continuity

NG

Replace or repair wire harness.

OK

Replace radio and player (See page IN-35).