

### 3. Cassette tape and CD does not sound. (Radio sound can be heard.)

#### INSPECTION PROCEDURE

##### 1 Check radio and player.

#### PREPARATION:

Disconnect the radio and player connector.

#### CHECK:

Check the voltage of terminal +B.

#### OK:

+B: 10 - 14 V

#### CHECK:

Check the voltage of terminal ACC when the ignition switch is in ACC or ON position.

#### OK:

ACC: 10 - 14 V

#### CHECK:

Check continuity at terminal GND.

#### OK:

GND: Continuity

NG

Replace or repair wire harness (See page IN-35).

OK

##### 2 Check wire harness between radio and player and stereo component amplifier.

#### PREPARATION:

Disconnect the radio and player and stereo component amplifier connectors.

#### CHECK:

- Check continuity of the wire harness between terminal R+ of the stereo component tuner and terminal R+ of the stereo component amplifier.
- Check continuity of the wire harness between terminal R- of the stereo component tuner and terminal R- of the stereo component amplifier.
- Check continuity of the wire harness between terminal L+ of the stereo component tuner and terminal L+ of the stereo component amplifier.
- Check continuity of the wire harness between terminal L- of the stereo component tuner and terminal L- of the stereo component amplifier.

#### OK:

Continuity

NG

Replace or repair wire harness (See page IN-35).

OK

Replace radio and player (See page IN-35).