

## 4. Radio does not sound. (Cassette tape and CD sound can be heard.)

### INSPECTION PROCEDURE

#### 1 Check stereo component tuner.

##### **PREPARATION:**

Disconnect the stereo component tuner connector.

##### **CHECK:**

Check the voltage of terminal +B.

##### **OK:**

+B: 10 - 14 V

##### **CHECK:**

Check the voltage of terminal ACC when the ignition switch is in ACC or ON position.

##### **OK:**

ACC: 10 - 14 V

##### **CHECK:**

Check continuity of terminal GND.

##### **OK:**

GND: Continuity

NG

Replace or repair wire harness (See page IN-35).

OK

#### 2 Check wire harness between stereo component tuner and stereo component amplifier.

##### **PREPARATION:**

Disconnect the stereo component tuner and stereo component amplifier connectors.

##### **CHECK:**

- Check continuity of the wire harness between terminal R+ of the stereo component tuner and terminal MR+ of the stereo component amplifier.
- Check continuity of the wire harness between terminal R- of the stereo component tuner and terminal MR- of the stereo component amplifier.
- Check continuity of the wire harness between terminal L+ of the stereo component tuner and terminal ML+ of the stereo component amplifier.
- Check continuity of the wire harness between terminal L- of the stereo component tuner and terminal ML- of the stereo component amplifier.

##### **OK:**

Continuity

NG

Replace or repair wire harness (See page IN-35).

OK

Replace stereo component tuner (See page IN-35).