

5. Sound of radio, cassette tape and CD cannot be heard, although radio is turned ON.

INSPECTION PROCEDURE

- | | |
|----------|--|
| 1 | Service check mode. (Stereo component amplifier, Radio and player and Stereo component tuner) |
|----------|--|

NG

Go to step 4.

OK

- | | |
|----------|--|
| 2 | Check stereo component amplifier. |
|----------|--|

PREPARATION:

Disconnect the stereo component amplifier connector.

CHECK:

Check the voltage of terminal +B.

OK:

+B: 10 - 14 V

CHECK:

Check the voltage of terminal ACC when the ignition switch is in ACC or ON position.

OK:

ACC: 10 - 14 V

CHECK:

Check continuity of terminal GND.

OK:

GND: Continuity

NG

Replace or repair wire harness connector (See page IN-35).

OK

3	Check stereo component amplifier.
----------	--

CHECK:

Check the voltage of terminals MUTE, N-MUTE and TMUT.

Check speaker cable for short circuit.

OK:

MUTE, N-MUTE, TMUT: See "Stereo component amplifier" of "TERMINAL OF ECU".

NO	Replace or repair wire harness connector (See page N-35).
-----------	---

OK

Replace stereo component amplifier (See page N-35).

4	Check AVC-LAN communication circuit (See page N-35).
----------	---

CHECK:

Check continuity of the wire harness between the stereo component amplifier and the radio and player.

OK:

Continuity

NG	Replace or repair wire harness connector (See page N-35).
-----------	---

OK

Replace stereo component amplifier (See page N-35).
