

9. CD can not be inserted.**INSPECTION PROCEDURE**

1 Check that a proper CD is inserted. (Is it a CD and free from scratches or dirt?)

NG

Replace CD.

OK

2 Check that CD is not set upside down.

NG

Set it properly.

OK

Replace radio and player.

HINT:

When sending it for repair, leave as it is without attempting to take it out by force.