

10. CD cannot be ejected.

INSPECTION PROCEDURE

1 Check RADIO NO. 1, P-ACC and P-IG fuse.

NG

Replace fuse.

OK

2 Check radio and player.

PREPARATION:

Disconnect the radio and player.

CHECK:

Check the voltage of terminal +B.

OK:

+B: 10 - 14 V

CHECK:

Check the voltage of terminal ACC when the ignition switch is in ACC or ON position.

OK:

ACC: 10 - 14 V

CHECK:

Check continuity at terminal GND.

OK:

GND: Continuity

NG

Replace or repair wire harness (See page IN-35).

OK

Replace radio and player (See page IN-35).

HINT:

When sending it for repair, leave as it is without attempting to take it out by force.