

11. No AM, FM or CD screen is displayed.

INSPECTION PROCEDURE

1 Check sound (Check if sound of radio, cassette tape, CD can be heard.).

OK

System check mode (Check radio and player.)
(See [page DI-1551](#)).

NG

2 Check radio and player.

PREPARATION:

Disconnect the radio and player connector.

CHECK:

Check the voltage of terminal +B.

OK:

+B: 10 - 14 V

CHECK:

Check the voltage of terminal ACC when the ignition switch is in ACC or ON position.

OK:

ACC: 10 - 14 V

CHECK:

Check continuity at terminal GND.

OK:

GND: Continuity

NG

Replace or repair wire harness or connector
(See [page IN-35](#)).

HINT:

When sending it for repair, leave as it is without attempting to take it out by force.

OK

3 Check AVC-LAN communication circuit (See page DI-1716).

CHECK:

Check continuity of the wire harness between the multi display and the radio and player.

OK:

Continuity

NG

Replace or repair AVC-LAN circuit.

OK

Replace radio and player.