

2. No sound with POWER switch pressed. ("Audio OFF" on audio screen)

INSPECTION PROCEDURE

1 Check stereo component amplifier.

PREPARATION:

Disconnect the stereo component amplifier connector.

CHECK:

Check the voltage of terminals +B.

OK:

+B: 10 - 14 V

CHECK:

Check voltage of terminal ACC when the ignition switch is in ACC or ON position.

OK:

ACC: 10 - 14 V

CHECK:

Check continuity at terminal GND.

OK:

GND: Continuity

NG

Replace or repair wire harness or connector (See page N-35).

OK

2 Service check mode. (Stereo component amplifier) (See page DI-1600)

CHECK

Go to step 4.

OK

3 Check stereo component amplifier.

CHECK:

Check the voltage of terminals MUTE, N-MUTE and TMUT.

OK:

MUTE, N-MUTE, TMUT: See "Stereo component amplifier" of "TERMINAL OF ECU"

NG

Replace or repair wire harness or connector (See page IN-35).

OK

Replace stereo component amplifier (See page IN-35).

4 Check "AVC-LAN communication circuit" (See page DI-1716).

CHECK:

Check continuity of the wire harness between the stereo component amplifier and the radio and player.

OK:

Continuity

NG

Replace or repair AVC-LAN circuit (See page IN-35).

OK

Replace stereo component amplifier (See page IN-35).