

### 3. No navigation screen displayed when "MAP", "MENU", or "DESTINATION" switch pressed. (Screen cannot be switched.)

#### INSPECTION PROCEDURE

1 Service check mode. (Navigation ECU) (See page DI-1600)

CHEK

Troubleshoot for each diagnosis.

OK

Replace multi display (See page IN-35).

NCON

2 Check navigation ECU.

#### PREPARATION:

Disconnect the navigation ECU connector.

#### CHECK:

Check the voltage of terminal +B.

#### OK:

+B: 10 - 14 V

#### CHECK:

Check the voltage of terminal ACC when the ignition switch is in ACC or ON position.

#### OK:

ACC: 10 - 14 V

#### CHECK:

Check continuity at terminal GND.

#### OK:

GND: Continuity

NG

Replace or repair wire harness (See page IN-35).

OK

**3** Check navigation ECU.**CHECK:**

Check terminal R, G and B.

**OK:**

R, G, B: See "Navigation ECU" of "TERMINAL OF ECU".

**NG**

Replace navigation ECU (See page IN-35).

**OK****4** Check multi display.**PREPARATION:**

Disconnect the multi display connector.

**CHECK:**

Check the voltage of terminal +B.

**OK:**

+B: 10 - 14 V

**CHECK:**

Check the voltage of terminal ACC when the ignition switch is in ACC or ON position.

**OK:**

ACC: 10 - 14 V

**CHECK:**

Check continuity at terminal GND.

**OK:**

GND: Continuity

**CHECK:**

Check terminal R, G and B.

**OK:**

R, G, B: See "multi display" of "TERMINAL OF ECU"

**NG**

Replace or repair wire harness or connector (See page IN-35).

**OK**

**5** Check "AVC-LAN communication circuit" (See page DI-1716).**CHECK:**

Check continuity of the wire harness between the multi display and the navigation ECU.

**OK:****Continuity****NG**

Replace or repair AVC-LAN circuit (See page IN-35).

**OK**

Replace multi display (See page IN-35).