

5. No navigation displayed, "Audio OFF" on audio screen and no audio sound.

INSPECTION PROCEDURE

- 1 Service check mode. (Radio and player, stereo component tuner) (See page DI-1600)

NG

Troubleshoot for each diagnosis.

OK

- 2 Check radio and player.

PREPARATION:

Disconnect the radio and player connector.

CHECK:

Check the voltage of terminal +B.

OK:

+B: 10 - 14 V

CHECK:

Check the voltage of terminal ACC when the ignition switch is in ACC or ON position.

OK:

ACC: 10 - 14 V

CHECK:

Check continuity at terminal GND.

OK:

GND: Continuity

NG

Replace or repair wire harness (See page IN-35).

OK

3 Check AVC-LAN communication circuit (See page DI-1716).

CHECK:

- (a) Check continuity of the wire harness between the stereo component amplifier and the radio and player.
- (b) Check continuity of the wire harness between the multi display and the radio and player.

OK:**Continuity****NG**

Replace or repair AVC-LAN circuit (See page IN-35).

OK

Replace multi display (See page IN-35).