

10. Sound of radio, cassette tape or CD only cannot be heard from speaker.

INSPECTION PROCEDURE

1 Check radio and player.

PREPARATION:

Disconnect the radio and player connector.

CHECK:

Check the voltage of terminal +B.

OK:

+B: 10 - 14 V

Check the voltage of terminal ACC when the ignition switch is in ACC or ON position.

OK:

ACC: 10 - 14 V

Check continuity at terminal GND.

OK:

GND: Continuity

NG

Replace or repair wire harness or connector (See page N-35).

OK

2 Check stereo component tuner.

PREPARATION:

Disconnect the stereo component tuner connector.

CHECK:

Check the voltage of terminal +B.

OK:

+B: 10 - 14 V

Check the voltage of terminal ACC when the ignition switch is in ACC or ON position.

OK:

ACC: 10 - 14 V

Check continuity at terminal GND.

OK:

GND: Continuity

NG

Replace or repair wire harness or connector (See page N-35).

OK

3 Check wire harness between radio and player and stereo component amplifier.

PREPARATION:

Disconnect the radio and player and stereo component amplifier connectors.

CHECK:

- Check continuity of the wire harness between terminal R+ of the radio and player and terminal R+ of the stereo component amplifier.
- Check continuity of the wire harness between terminal R- of the radio and player and terminal R- of the stereo component amplifier.
- Check continuity of the wire harness between terminal L+ of the radio and player and terminal L+ of the stereo component amplifier.
- Check continuity of the wire harness between terminal L- of the radio and player and terminal L- of the stereo component amplifier.

OK:

Continuity

NG

Replace radio and player (See page IN-35).

OK

4 Check the wire harness between stereo component tuner and stereo component amplifier.

PREPARATION:

Disconnect the stereo component tuner and stereo component amplifier connectors.

CHECK:

- Check continuity of the wire harness between terminal R+ of the stereo component tuner and terminal MR+ of the stereo component amplifier.
- Check continuity of the wire harness between terminal R- of the stereo component tuner and terminal MR- of the stereo component amplifier.
- Check continuity of the wire harness between terminal L+ of the stereo component tuner and terminal ML+ of the stereo component amplifier.
- Check continuity of the wire harness between terminal L- of the stereo component tuner and terminal ML- of the stereo component amplifier.

OK:

Continuity

NG

Replace stereo component tuner (See page IN-35).

OK

Replace stereo component amplifier (See page IN-35).