

12. Map DISC cannot be inserted.

INSPECTION PROCEDURE

1 Check MAP DISC visually.

NG

Replace MAP DISC.

OK

2 Insert MAP DISC without tilt.

OK

Normal.

NG

3 Check navigation ECU.

PREPARATION:

Disconnect the navigation ECU connector.

CHECK:

Check the voltage of terminal B.

OK:

+B: 10 – 14 V

Check the voltage of terminal ACC when the ignition switch is in ACC or ON position.

OK:

ACC: 10 – 14 V

Check continuity at terminal GND.

OK:

GND: Continuity

NG

Replace or repair wire harness or connector (See page N-35).

OK

Replace navigation ECU (See page N-35).