

**14. Map is displayed in white or blue screen. (Switches and vehicle position mark are displayed.)****INSPECTION PROCEDURE****1 Set map scale to max.****OK****Normal.**

HINT:

Correct the current position and check it again.

**NG****2 Wipe disc with soft cloth, insert again, and turn ignition switch ON from OFF.****OK****Normal.**

HINT:

If the trouble still occurs, replace the navigation ECU.

**NG****Replace MAP DISC.**