

16. Touch switch does not function. (Navigation screen only)

INSPECTION PROCEDURE

1 Display check mode (Touch switch, Touch point screen).

NG

Replace multi display (See page IN-35).

OK

2 Check AVC-LAN communication circuit (See page DI-1716)

CHECK:

Check continuity of the wire harness between the navigation ECU and the multi display.

OK:

Continuity

NG

Replace or repair AVC-LAN circuit (See page IN-35).

OK

Replace navigation ECU (See page IN-35).