

19. No voice navigation.

INSPECTION PROCEDURE

1 Set volume to MAX in menu screen. Check that confirming voice can be heard.

OK

Normal. (Voice navigation is not available because no destination is set, or the vehicle is running off the route.)

NG

2 Check wire harness between navigation ECU and driver side door speaker.

PREPARATION:

Disconnect the navigation ECU connector and driver side door speaker connectors.

CHECK:

- Check continuity of the wire harness between terminal AUO+ of the navigation ECU and terminal 1 of the driver side door speaker.
- Check continuity of the wire harness between terminal AUO- of the navigation ECU and terminal 2 of the driver side door speaker.

OK:

Continuity

NG

Replace or repair wire harness or connector (See page IN-35).

OK

3 Check sound. (Check if radio sound can be heard from driver side door speaker.)

OK

Replace navigation ECU (See page IN-35).

NG

Replace speaker.