

## 20. Vehicle position mark rotates without control. (Map rotates without control)

### INSPECTION PROCEDURE

- 1 Recheck. (While not rotating the vehicle, turn ignition switch ON from OFF again.)

OK

Normal. (While the vehicle was turning, the ignition switch was turned ON.)

NG

- 2 System check mode. (Is "58-10" is output in unit check mode of navigation ECU?) (See page DI-1600)

Yes

Replace navigation ECU (See page IN-35).

No

- 3 System check mode. (Is "58-43" is output in unit check mode of navigation ECU?) (See page DI-1600)

Yes

Replace and repair SPD terminal wire harness (See page IN-35).

No

- 4 Navigation check mode. (Vehicle signal check mode: SPD and gyro) (See page DI-1600)

OK

Replace navigation ECU (See page IN-35).

NG

Replace or repair wire harness (See page IN-35).