

21. Driving direction is opposite to moving direction of vehicle position mark.

INSPECTION PROCEDURE

1 Navigation check mode. (Vehicle signal check mode: REV) (See page DI-1600)

OK

Replace navigation ECU (See page IN-35).

NG

2 Check navigation ECU.

CHECK:

Check terminal REV.

OK:

REV: See "Navigation ECU" of "TERMINAL OF ECU".

OK

Replace navigation ECU (See page IN-35).

NG

Replace and repair wire harness (See page IN-35).