

**25. CD can not be inserted.****INSPECTION PROCEDURE**

1 Check that proper CD is inserted. (Is it CD and free from scratches or dirt?)

NG

Use a proper CD.

OK

2 Check that CD is not set upside down.

NG

Use a proper CD.

OK

Replace radio and player (See page IN-35).

**HINT:**

When sending it for repair, leave as it is without attempting to take it out by force.