

## 27. No AM, FM or CD screen is displayed.

### INSPECTION PROCEDURE

1 Check sound. (Check if sound of radio, cassette tape, CD can be heard.)

OK

System check mode. (Check radio and player.)  
(See page DI-1600)

NG

2 Check radio and player.

#### PREPARATION:

Disconnect the radio and player connector.

#### CHECK:

Check the voltage of terminal +B.

#### OK:

+B: 10 - 14 V

#### CHECK:

Check the voltage of terminal ACC when the ignition switch is in ACC or ON position.

#### OK:

ACC: 10 - 14 V

#### CHECK:

Check continuity at terminal GND.

#### OK:

GND: Continuity

NG

Replace or repair wire harness or connector  
(See page IN-35).

#### HINT:

When sending it for repair, leave as it is without attempting to take it out by force.

OK

3 Check "AVC-LAN communication circuit" (See page DI-1716).

**CHECK:**

Check continuity of the wire harness between the multi display and the radio and player.

**OK:****Continuity****NG**

Replace or repair AVC-LAN circuit (See page IN-35).

**OK**

Replace radio and player (See page IN-35).