

28. Audio screen is not displayed.

INSPECTION PROCEDURE

1 Check sound. (Check if radio sound can be heard from driver side door speaker.)

OK Go to step 3.

NG

2 Service check mode. (Stereo component amplifier) (See page DI-1600)

CHEK Troubleshoot for each diagnosis.

OK Replace multi display (See page IN-35).

NCON

Replace stereo component amplifier (See page IN-35).

3 Check stereo component amplifier.

PREPARATION:

Disconnect the stereo component amplifier connector.

CHECK:

Check the voltage of terminal +B.

OK:

+B: 10 – 14 V

CHECK:

Check the voltage of terminal ACC when the ignition switch is in ACC or ON position.

OK:

ACC: 10 – 14 V

CHECK:

Check continuity at terminal GND.

OK:

GND: Continuity

NG

Replace or repair wire harness or connector (See page N-35).

OK

Replace stereo component amplifier (See page N-35).