

## 29. Panel switches do not function.

### INSPECTION PROCEDURE

- 1 Check mark display. (To examine whether air conditioner screen is displayed with air conditioner SW.)

NG

Go to step 4.

OK

- 2 Display check mode. (Vehicle signal check mode: IG)

NG

Replace or repair speed sensor and wire harness (See page N-35).

OK

- 3 Display check mode. (Panel switch check, A/C-related switch check.)

NG

Replace multi display (See page N-35).

OK

Check gateway system.  
(A/C ECU communication circuit) (See page DI-1443)

4 Check AVC-LAN communication circuit (See page DI-1716).

**CHECK:**

Check continuity of the wire harness between the gateway ECU and the radio and player.

**OK:**

Continuity

NG

Replace or repair AVC-LAN circuit (See page IN-35).

OK

Check gateway system.  
(A/C ECU communication circuit)