

30. Touch SW on air conditioner screen does not function.

INSPECTION PROCEDURE

1 Display check mode. (Vehicle signal check mode: IG)

NG

Replace or repair speed sensor and wire harness (See page IN-35).

OK

2 Display check mode. (Touch switch check)

NG

Replace multi display (See page IN-35).

OK

Check gateway system.
(A/C ECU communication circuit) (See page DI-1443)