

35. Cellular mobile telephone screen is not displayed on multi display. (Navigation system screen is displayed.)

INSPECTION PROCEDURE

1 Service check mode. (TEL ECU) (See page DI-1500)

NG

Troubleshoot for each diagnosis.

OK

2 Check wire harness between navigation ECU and TEL ECU.

PREPARATION:

Disconnect the navigation ECU and TEL ECU connectors.

CHECK:

Check continuity of the wire harness between terminals of the cellular mobile telephone and those of the TEL ECU.

OK:

Continuity

NG

Replace or repair wire harness or connector (See page N-35).

OK

3 Check TEL ECU.

PREPARATION:

Disconnect the TEL ECU connector.

CHECK:

Check the voltage of terminal +B.

OK:

+B: 10 - 14 V

CHECK:

Check the voltage of terminal ACC when the ignition switch is in ACC or ON position.

OK:

ACC: 10 - 14 V

CHECK:

Check continuity at terminal GND.

OK:

GND: Continuity

NG

Replace or repair wire harness (See page IN-35).

OK

Replace TEL ECU (See page IN-35).