



## PRE-CHECK

### 1. DTC CHECK (Using hand-held tester)

- (a) Connect the LEXUS hand-held to DLC3.
- (b) Turn the ignition switch ON and the LEXUS hand-held tester main switch ON.
- (c) Use the LEXUS hand-held tester to check the DTC, note them down. (For opening instructions, see the LEXUS hand-held tester's instruction book).
- (d) See page DI-1724, to confirm the details of the DLC3.

### 2. DTC CLEARANCE

DTC will be cleared when the defective condition is recovered normally.