

## DIAGNOSTIC TROUBLE CODE CHART

If a malfunction code is displayed during the DTC check, check the circuit listed for that code in the table below and proceed to the appropriate page.

DTC No. (See page)	Circuit Inspection	Trouble Area
B2231 (DI-1729)	Front Left Side sensor Malfunction	<ul style="list-style-type: none"> <li>• Front Left Side sensor</li> <li>• Wire harness</li> </ul>
B2232 (DI-1731)	Front Left sensor Malfunction	<ul style="list-style-type: none"> <li>• Front Left sensor</li> <li>• Wire harness</li> </ul>
B2233 (DI-1733)	Front Left Center sensor Malfunction	<ul style="list-style-type: none"> <li>• Front Left Center sensor</li> <li>• Wire harness</li> </ul>
B2234 (DI-1735)	Front Right Center sensor Malfunction	<ul style="list-style-type: none"> <li>• Front Right Center sensor</li> <li>• Wire harness</li> </ul>
B2235 (DI-1737)	Front Right sensor Malfunction	<ul style="list-style-type: none"> <li>• Front Right sensor</li> <li>• Wire harness</li> </ul>
B2236 (DI-1739)	Front Right Side sensor Malfunction	<ul style="list-style-type: none"> <li>• Front Right Side sensor</li> <li>• Wire harness</li> </ul>
B2237 (DI-1741)	Rear Left sensor Malfunction	<ul style="list-style-type: none"> <li>• Rear Left sensor</li> <li>• Wire harness</li> </ul>
B2238 (DI-1743)	Rear Left Center sensor Malfunction	<ul style="list-style-type: none"> <li>• Rear Left Center sensor</li> <li>• Wire harness</li> </ul>
B2239 (DI-1745)	Rear Right Center sensor Malfunction	<ul style="list-style-type: none"> <li>• Rear Right Center sensor</li> <li>• Wire harness</li> </ul>
B2241 (DI-1747)	Rear Right sensor Malfunction	<ul style="list-style-type: none"> <li>• Rear Right sensor</li> <li>• Wire harness</li> </ul>