

**PROBLEM SYMPTOMS TABLE**

Symptom	Suspect Area	See page
Entirely inoperative (Self check does not function).	1. Power source circuit 2. Clearance sonar ECU	DI-1749 IN-35
Entirely inoperative (Self check function normally).	1. Power source circuit 2. Combination meter system 3. Clearance sonar ECU	DI-1749 DI-930 IN-35
Front LH side sonar only does not function.	1. Front left sensor circuit 2. Front left side sensor circuit 3. Front left center LH sensor circuit 4. Clearance sonar ECU	DI-1731 DI-1729 DI-1733 IN-35
Front RH side sonar only does not function.	1. Front right sensor circuit 2. Front right side sensor circuit 3. Front right center RH sensor circuit 4. Clearance sonar ECU	DI-1737 DI-1739 DI-1735 IN-35
Rear LH sonar only does not function.	1. Rear left sensor circuit 2. Rear left center sensor circuit 3. Clearance sonar ECU	DI-1741 DI-1743 IN-35
Rear RH sonar only does not function.	1. Rear right sensor circuit 2. Rear right center sensor circuit 3. Clearance sonar ECU	DI-1747 DI-1745 IN-35
Although detection can be done, no buzzer sounds sometimes.	1. Clearance sonar warning buzzer circuit 2. Clearance sonar ECU	DI-1753 IN-35
Although detection can be done, the power indicator does not light sometimes.	1. Clearance sonar warning buzzer circuit 2. Combination meter system 3. Clearance sonar ECU	DI-1753 DI-930 IN-35
The system operates with the shift lever not in R position, or does not operate with the shift lever in R position. *1	1. Neutral start switch circuit 2. Clearance sonar ECU	DI-230 IN-35
The system operates with the shift lever in P position, or does not operate with the shift lever not in P position. *2	1. Neutral start switch circuit 2. Clearance sonar ECU	DI-230 IN-35
Detection can be done although the vehicle speed is 10km/h (6 mph) or less.	1. Speed sensor circuit 2. Clearance sonar ECU	DI-95 IN-35
Buzzer volume is too low.	1. Clearance sonar warning buzzer circuit 2. Clearance sonar ECU	DI-1753 IN-35
No clearance sonar information displayed in multi-display.	1. LEXUS navigation system 2. Clearance sonar ECU	DI-1598 IN-35
No clearance sonar information displayed in multi information display (Combination meter).	1. Combination meter system 2. Clearance sonar ECU	DI-930 IN-35

\*1: Back sonar

\*2: Clearance sonar