


<b>DTC</b>	<b>B2239</b>	<b>Rear Right Center Sensor Malfunction</b>
------------	--------------	---

**CIRCUIT DESCRIPTION**

This DTC is output when failure of the ultrasonic sensor (rear right center) is detected.

DTC No.	DTC Detecting Condition	Trouble Area
B2238	• Malfunction of ultrasonic sensor (rear right center)	• Ultrasonic sensor (rear right center) • Wire Harness

**WIRING DIAGRAM**

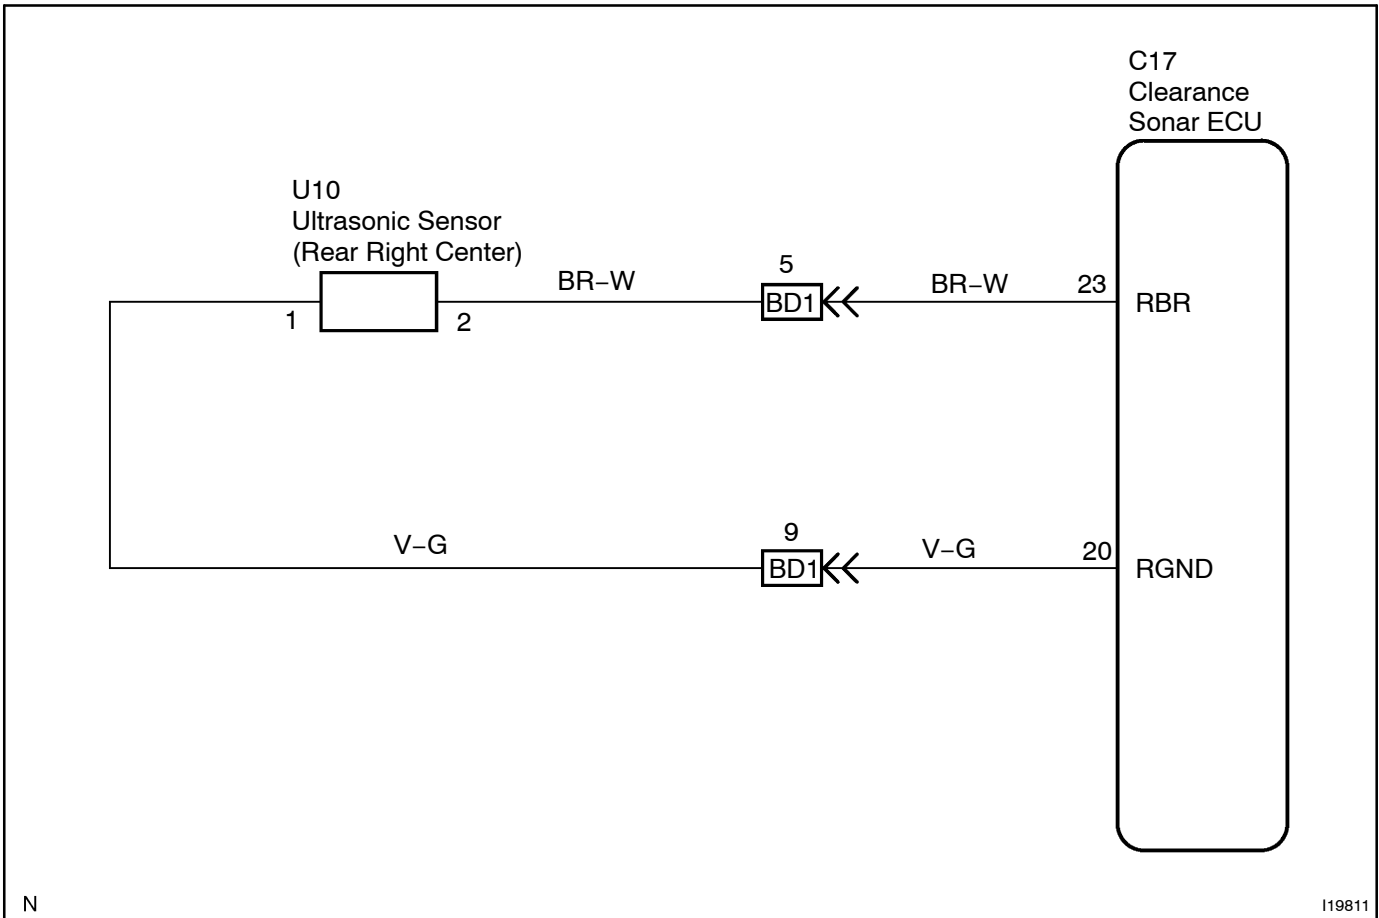

N

I19811

**INSPECTION PROCEDURE**

1 Check clearance sonar sensor (See page BE-183).

NG

Replace clearance sonar sensor.

OK

2 Check wire harness and connector between clearance sonar sensor and clearance sonar ECU (See page IN-35).

NG

Repair or replace wire harness or connector.

OK

Replace clearance sonar ECU (See page IN-35).