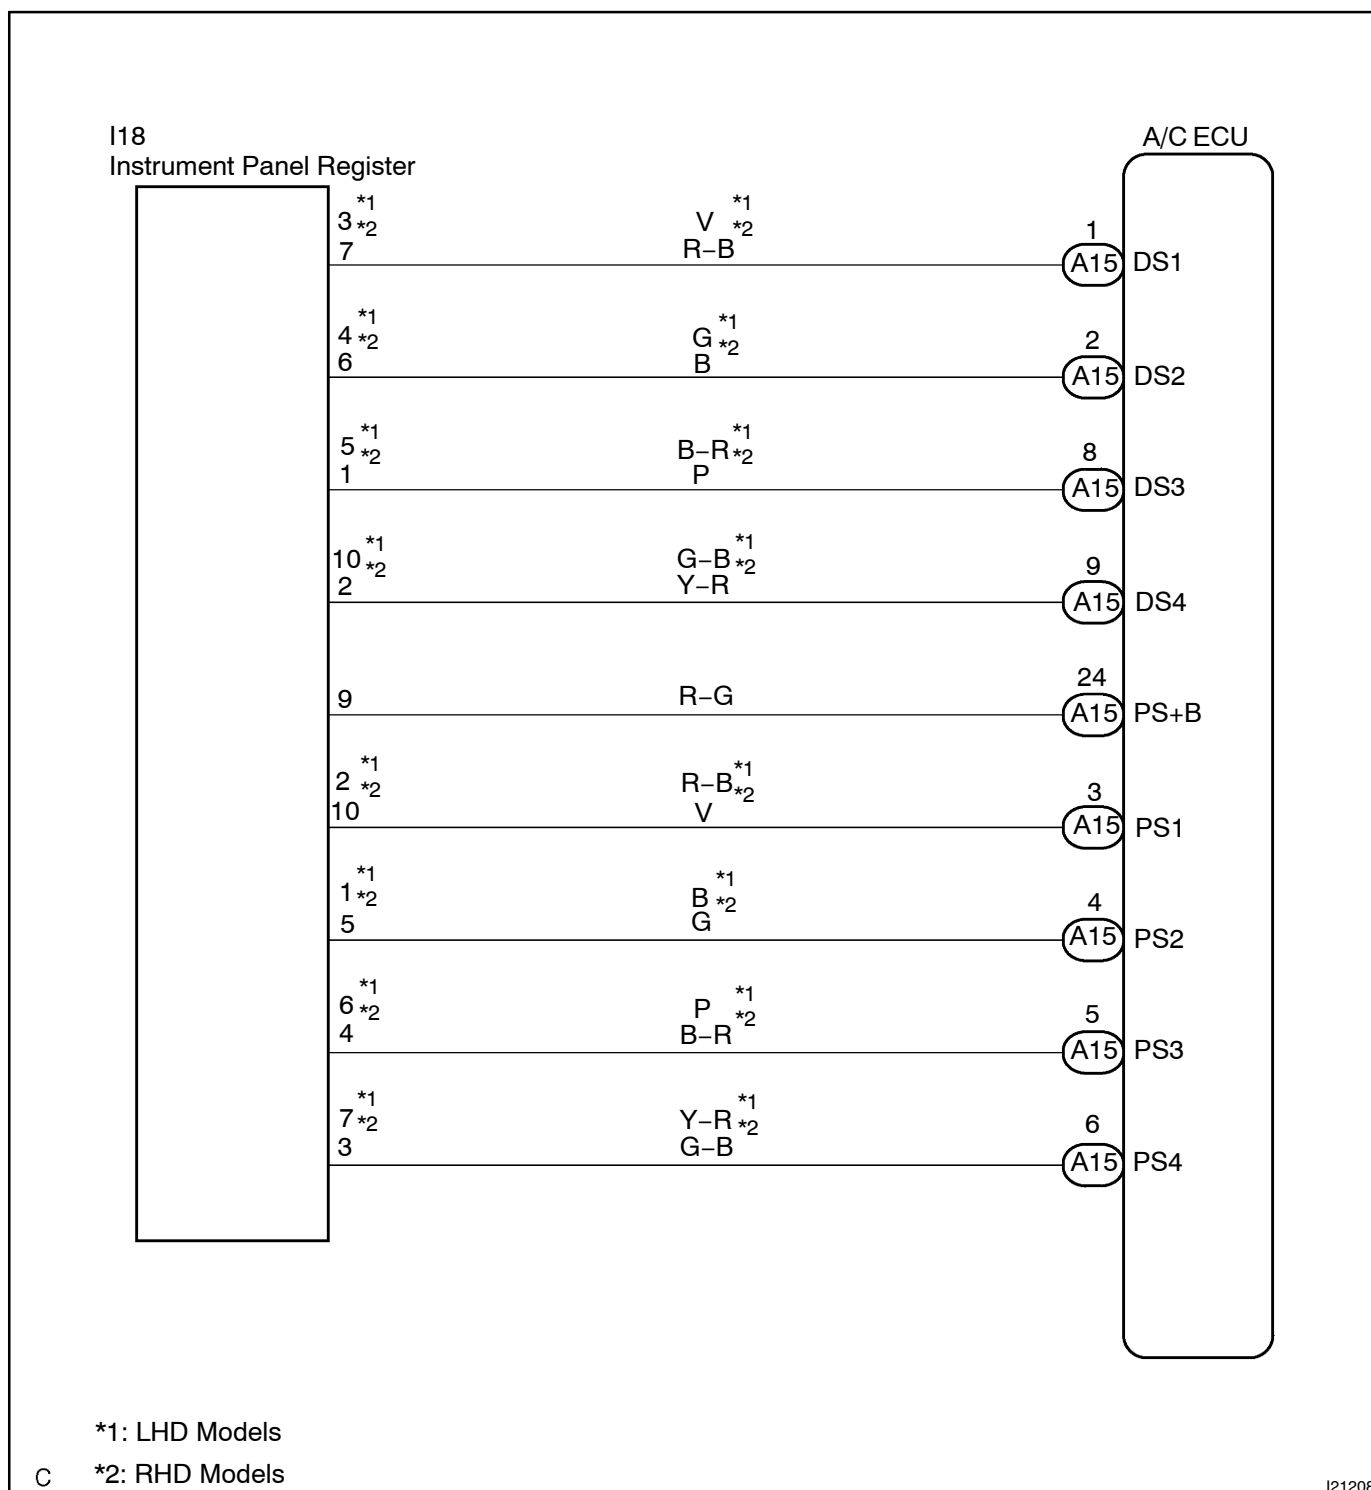


Intelligent Swing Register Circuit

CIRCUIT DESCRIPTION

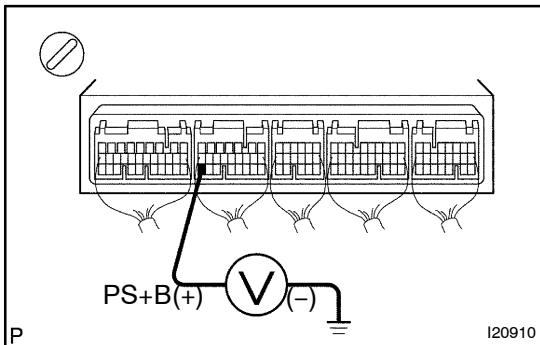
The intelligent swing register is controlled by the A/C ECU. It is activated by selecting a FACE or BI-LEVEL of mode select switch and turning ON the swing register switch.

WIRING DIAGRAM



INSPECTION PROCEDURE

1 Check voltage between terminals PS+B of A/C ECU connector.

**PREPARATION:**

Remove A/C ECU with connectors still connected.

CHECK:

- (a) Turn ignition switch to ON.
- (b) Set mode selector to FACE or B/L.
- (c) Measure voltage between terminals PS+B of A/C ECU when SWING switch is pressed.

OK:

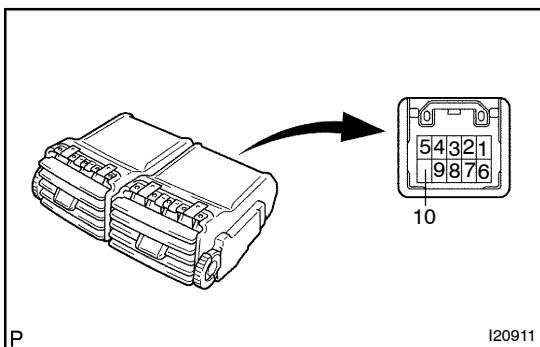
Voltage : Battery voltage

OK

Go to step 3.

NG

2 Check intelligent swing resistor step motor.

**PREPARATION:**

Remove intelligent swing register.

CHECK:

Measure resistance between terminals 9 and other terminals.

OK:

Terminal No.					Standard Value
3 (2)	4 (1)	9	5 (6)	10 (7)	
⊖		⊕			279 - 321 Ω
	⊖	⊕			279 - 321 Ω
		⊕	⊖		279 - 321 Ω
		⊕		⊖	279 - 321 Ω

○: Battery terminal

(): Passenger Side

NG

Replace intelligent swing resistor.

OK

3 Check harness and connector between intelligent swing register and A/C ECU (See page IN-35).

NG

Check and replace harness and connector.

OK

Check and replace A/C ECU.