


INJECTOR

ON-VEHICLE INSPECTION

1. REMOVE V-BANK COVER
2. REMOVE INTAKE AIR CONNECTOR
3. INSPECT INJECTOR RESISTANCE
 - (a) Disconnect the 8 injector connectors.

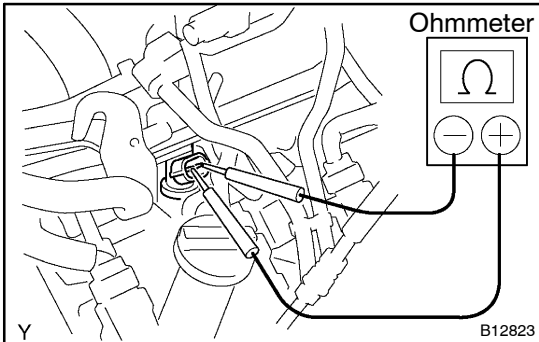

- (b) Using a ohmmeter, measure the resistance between the terminals.

Resistance: 13.4 – 14.2 Ω at 20°C (68°F)

If the resistance is not as specified, replace the injector.

- (c) Reconnect the 8 injector connectors.
4. REINSTALL INTAKE AIR CONNECTOR
5. REINSTALL V-BANK COVER