

INSTALLATION

1. INSTALL FUEL PRESSURE PULSATION DAMPERS

Using SST, install 2 new gaskets, the rear fuel pipe and pulsation damper. Install the 2 pulsation dampers.

SST 09612-24014 (09617-24011)


Torque:

39 N·m (400 kgf·cm, 29 ft·lbf)

33 N·m (340 kgf·cm, 24 ft·lbf) for SST

HINT:


Use a torque wrench with a fulcrum length of 30 cm (11.81 in.).

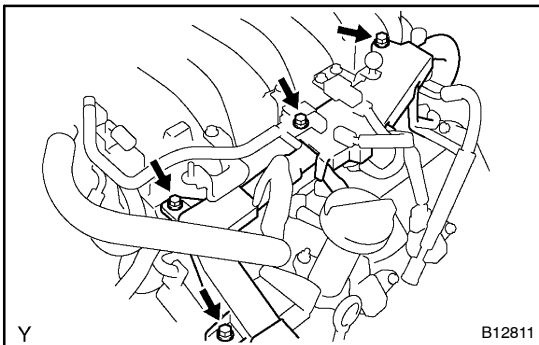

2. CONNECT ENGINE WIRE

(a) Connect the engine wire with cover and wire clamp bracket with 3 bolts to intake manifold.

(b) Install the 2 heater pipes with the 3 bolts.

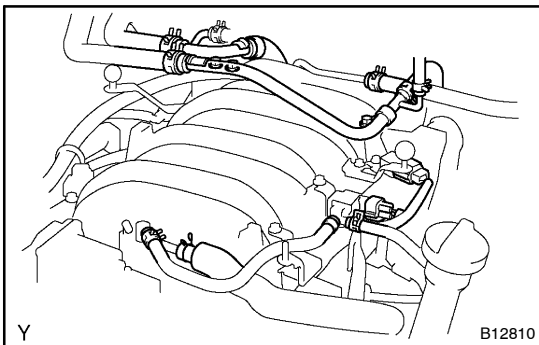

(c) Connect the EVAP hose (from the charcoal canister).

(d) Connect the EVAP hose.

(e) Connect the brake booster vacuum hose.

(f) Connect the PCV hose.

(g) Connect the VSV connector for EVAP.

(h) Connect the noise filter connector.

3. CHECK FOR FUEL LEAKS (See page FI-1)

4. INSTALL V-BANK COVER