

# BODY

## INSPECTION

### 1. INSPECT CLIMATE CONTROL SEAT FILTER

- (a) Remove the climate control seat filter from the seat.
- (b) Visually check that the climate control seat filter is not excessively dirty. If necessary, replace the climate control seat filter.
- (c) Clean the filter with compressed air.  
First blow from the inside thoroughly, then blow the outside of the filter.
- (d) Reinstall the climate control seat filter.

### 2. CHECK TIRES AND INFLATION PRESSURE

### 3. TIGHTEN BOLTS AND NUTS ON CHASSIS AND BODY

- (a) Where necessary, tighten all parts of the chassis.
  - Front axle and suspension
  - Driven train
  - Rear axle and suspension
  - Steering system
  - Brake system
  - Engine mounting etc.
- (b) Where necessary, tighten all parts of the body.
  - Seat belt system
  - Seats
  - Doors and hood
  - Body mountings
  - Fuel tank
  - Exhaust pipe system etc.
- (c) Check tires for abnormal abrasion or cracks.
- (d) Check and adjust the tires inflation pressure.

**Cold tire inflation pressure:** (See page SA-3)

### 4. CHECK LIGHTS, HORNS, WIPERS AND WASHERS

Check the function of lights, horns, wipers and washers.

### 5. ROAD TEST

- (a) Check the engine and chassis for abnormal noises.
- (b) Check that the vehicle does not wander or pull to one side.
- (c) Check that the brakes work properly and do not drag.
- (d) Do setting of the parking brake shoes and drum.

### 6. FINAL INSPECTION

- (a) Check the operation of the body parts:
  - Hood  
Auxiliary catch operates properly  
Hood locks securely when closed
  - Front and rear doors  
Door locks operate properly  
Doors close properly
  - Luggage compartment door  
Door lock operates properly
  - Seat adjusts easily and locks securely in any position  
Front seat back locks securely in any position  
Folding-down rear seat backs lock securely

(b) Be sure to deliver a clean car. Especially check:

- Steering wheel
- Shift lever knob
- All switch knobs
- Seats