


TERMINALS OF ECU

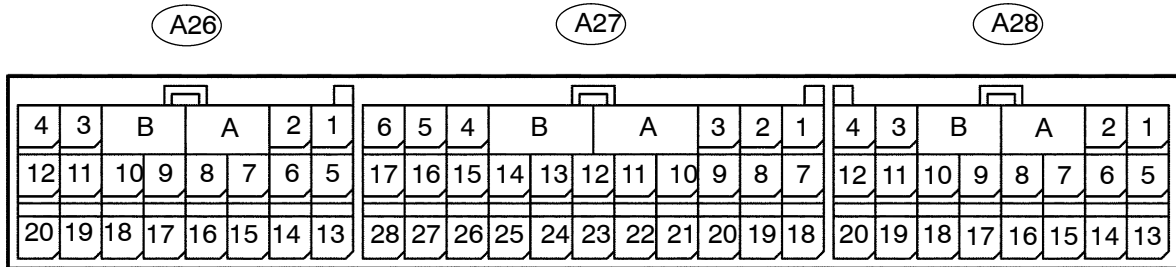

P

H16828

No.	Symbol	Terminal Name
A	-	Electrical Connector Check Mechanism
B	-	Electrical Connector Check Mechanism
A27 - 5	IG2	Power Source
A27 - 6	IG1	Power Source
A27 - 7	P2-	Squib (Passenger, 2nd step)
A27 - 8	P2+	Squib (Passenger, 2nd step)
A27 - 9	+SR	Front Airbag Sensor (RH)
A27 - 10	P+	Squib (Passenger)
A27 - 11	P-	Squib (Passenger)
A27 - 12	SIL	Diagnosis
A27 - 13	D-	Squib (Driver)
A27 - 14	D+	Squib (Driver)
A27 - 15	+SL	Front Airbag Sensor (LH)
A27 - 16	D2+	Squib (Driver, 2nd step)
A27 - 17	D2-	Squib (Driver, 2nd step)
A27 - 20	-SR	Front Airbag Sensor (RH)
A27 - 22	MPX2	Instrument Panel Integration ECU
A27 - 24	MPX1	Engine ECU
A27 - 26	-SL	Front Airbag Sensor (LH)
A27 - 27	E1	Ground
A27 - 28	E2	Ground
A26 - 1 (*2)	LSP- (*2)	Seat Position Sensor Assembly
A26 - 2 (*2)	LSP+ (*2)	Seat Position Sensor Assembly
A26 - 3 (*1)	FSL- (*1)	Occupant Detection Sensor
A26 - 4 (*1)	FSL+ (*1)	Occupant Detection Sensor

No.	Symbol	Terminal Name
A26 - 5	PLR+	Squib (Rear Seat Belt Pretensioner, LH)
A26 - 6	PLR-	Squib (Rear Seat Belt Pretensioner, LH)
A26 - 7	PL-	Squib (Seat Belt Pretensioner, LH)
A26 - 8	PL+	Squib (Seat Belt Pretensioner, LH)
A26 - 9	ICL+	Squib (Curtain Shield Airbag Assembly (LH))
A26 - 10	ICL-	Squib (Curtain Shield Airbag Assembly (LH))
A26 - 11	SFL-	Squib (Side, LH)
A26 - 12	SFL+	Squib (Side, LH)
A26 - 13	ESCL	Curtain Shield Airbag Sensor (LH)
A26 - 14	VUCL	Curtain Shield Airbag Sensor (LH)
A26 - 16	VUPL	Side Airbag Sensor (LH)
A26 - 17	SSL+	Side Airbag Sensor (LH)
A26 - 18	ESL	Side Airbag Sensor (LH)
A26 - 19	LBE+	Seat Belt Buckle Switch (RH)
A26 - 20	SSL-	Side Airbag Sensor (LH)
A28 - 1 (*2)	FSR+ (*2)	Occupant Detection Sensor
A28 - 2 (*2)	FSR- (*2)	Occupant Detection Sensor
A28 - 3 (*1)	RSP+ (*1)	Seat Position Sensor Assembly
A28 - 4 (*1)	RSP- (*1)	Seat Position Sensor Assembly
A28 - 5	SFR+	Squib (Side, RH)
A28 - 6	SFR-	Squib (Side, RH)
A28 - 7	ICR-	Squib (Curtain Shield Airbag Assembly (RH))
A28 - 8	ICR+	Squib (Curtain Shield Airbag Assembly (RH))
A28 - 9	PR+	Squib (Seat Belt Pretensioner, RH)
A28 - 10	PR-	Squib (Seat Belt Pretensioner, RH)
A28 - 11	PRR-	Squib (Rear Seat Belt Pretensioner, RH)
A28 - 12	PRR+	Squib (Rear Seat Belt Pretensioner, RH)
A28 - 13	SSR-	Side Airbag Sensor (RH)
A28 - 14	RBE+	Seat Belt Buckle Switch (LH)
A28 - 15	ESR	Side Airbag Sensor (RH)
A28 - 16	SSR+	Side Airbag Sensor (RH)
A28 - 17	VUPR	Side Airbag Sensor (RH)
A28 - 19	VUCR	Curtain Shield Airbag Sensor (RH)
A28 - 20	ESCR	Curtain Shield Airbag Sensor (RH)

(*1): RHD

(*2): LHD