


DIAGNOSTIC TROUBLE CODE CHART

If a malfunction code is displayed during the DTC check, check the circuit listed for that code in the table below and proceed to the appropriate page.

DTC No. (See Page)	Circuit Inspection	Trouble Area
B1242 (DI-815)	Wireless Door Lock Tuner Circuit Malfunction	<ul style="list-style-type: none"> • Wire harness • Wireless Door Lock Tuner • Luggage Tuner • Theft deterrent ECU
*B2761 (DI-817)	Intrusion Sensor Internal Circuit Malfunction	<ul style="list-style-type: none"> • Intrusion sensor • Theft deterrent ECU
*B2762 (DI-819)	Intrusion Sensor Signal Circuit Malfunction	<ul style="list-style-type: none"> • Intrusion sensor • Wire harness • Theft deterrent ECU
*B2763 (DI-821)	Intrusion Sensor +B Circuit Malfunction (GND short)	<ul style="list-style-type: none"> • Intrusion sensor • Wire harness • Theft deterrent ECU

*: Europe Models

SYSTEM DIAGRAM (): DTC

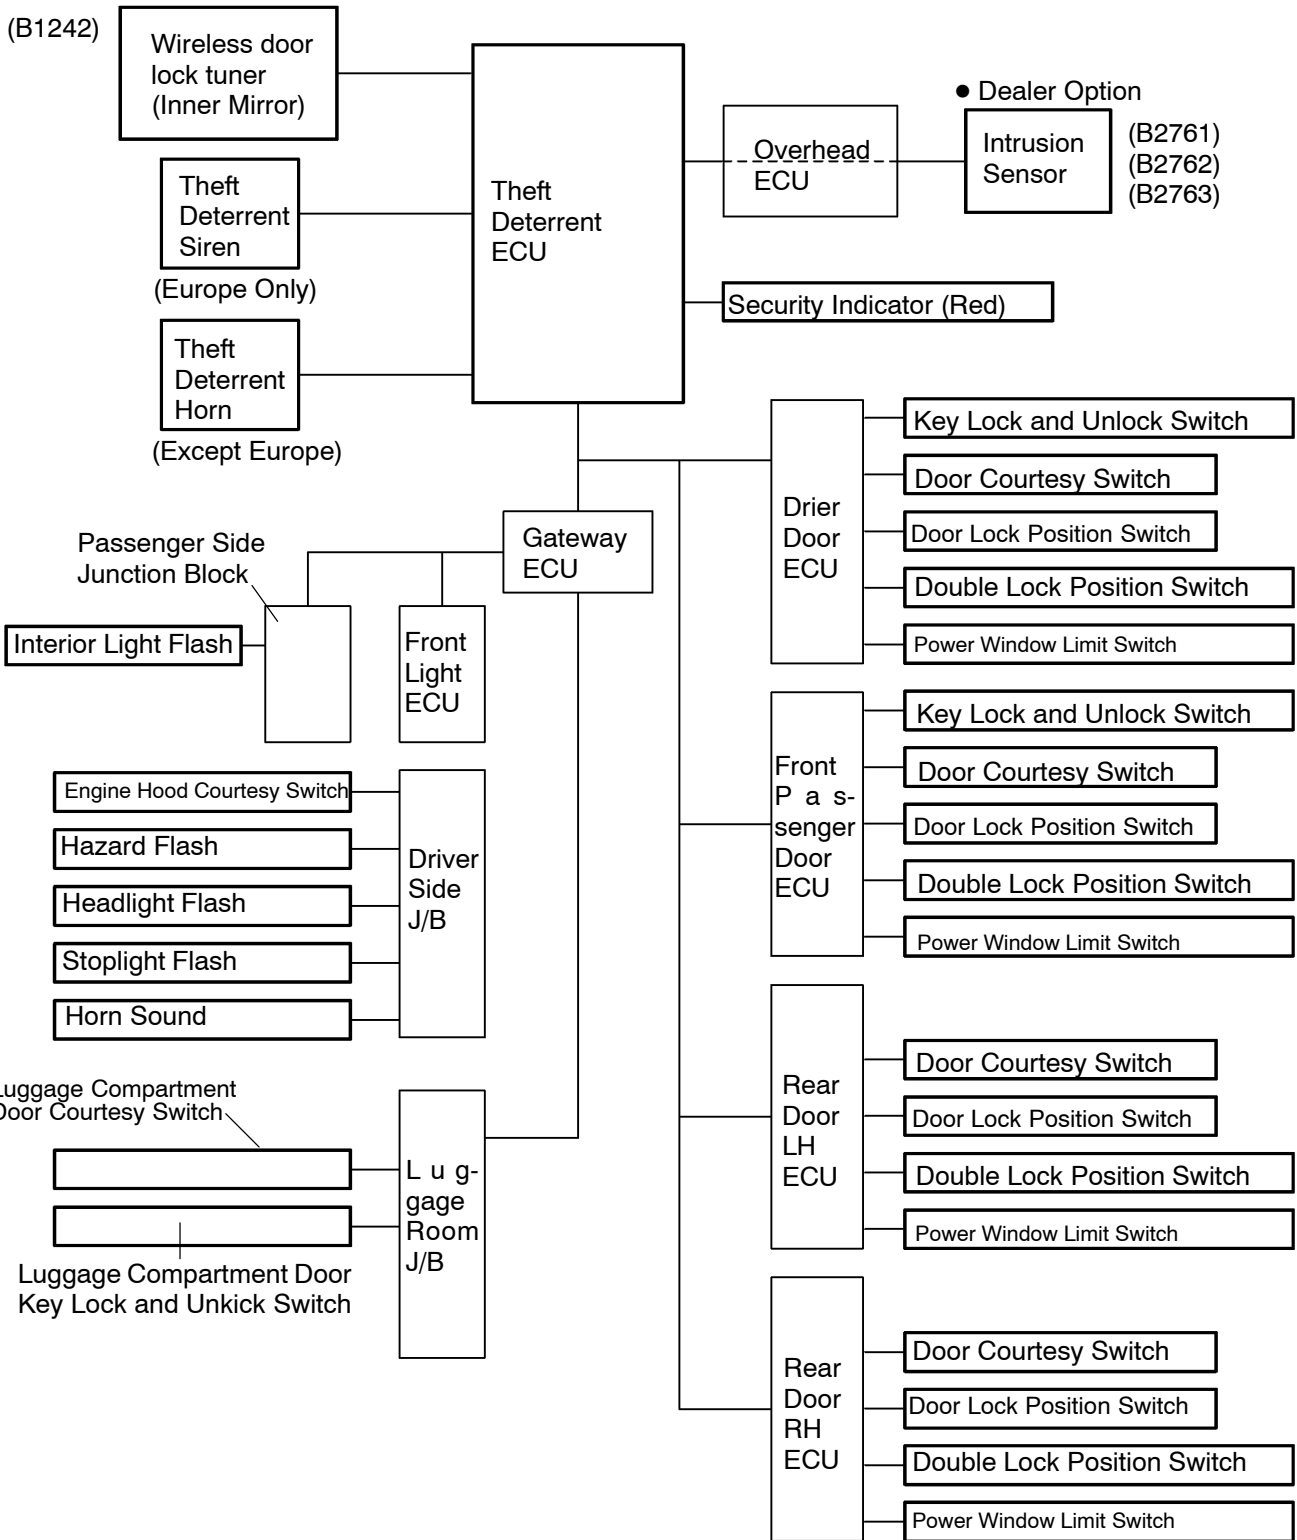

T

I20503