

DTC	Normal	Source Voltage Drop
------------	---------------	----------------------------

CIRCUIT DESCRIPTION

The SRS is equipped with a voltage-increase circuit (DC-DC converter) in the airbag sensor assembly in case the source voltage drops.


When the battery voltage drops, the voltage-increase circuit (DC-DC converter) functions to increase the voltage of the SRS to normal voltage.

The diagnosis system malfunction display for this circuit is different from other circuits that is when the SRS warning light remains lit up and the DTC is a normal code, source voltage drop is indicated.

Malfunction in this circuit is not recorded in the airbag sensor assembly, and the source voltage returns to normal, the SRS warning light automatically goes off.


DTC No.	Diagnosis
(Normal)	Source voltage drop

WIRING DIAGRAM

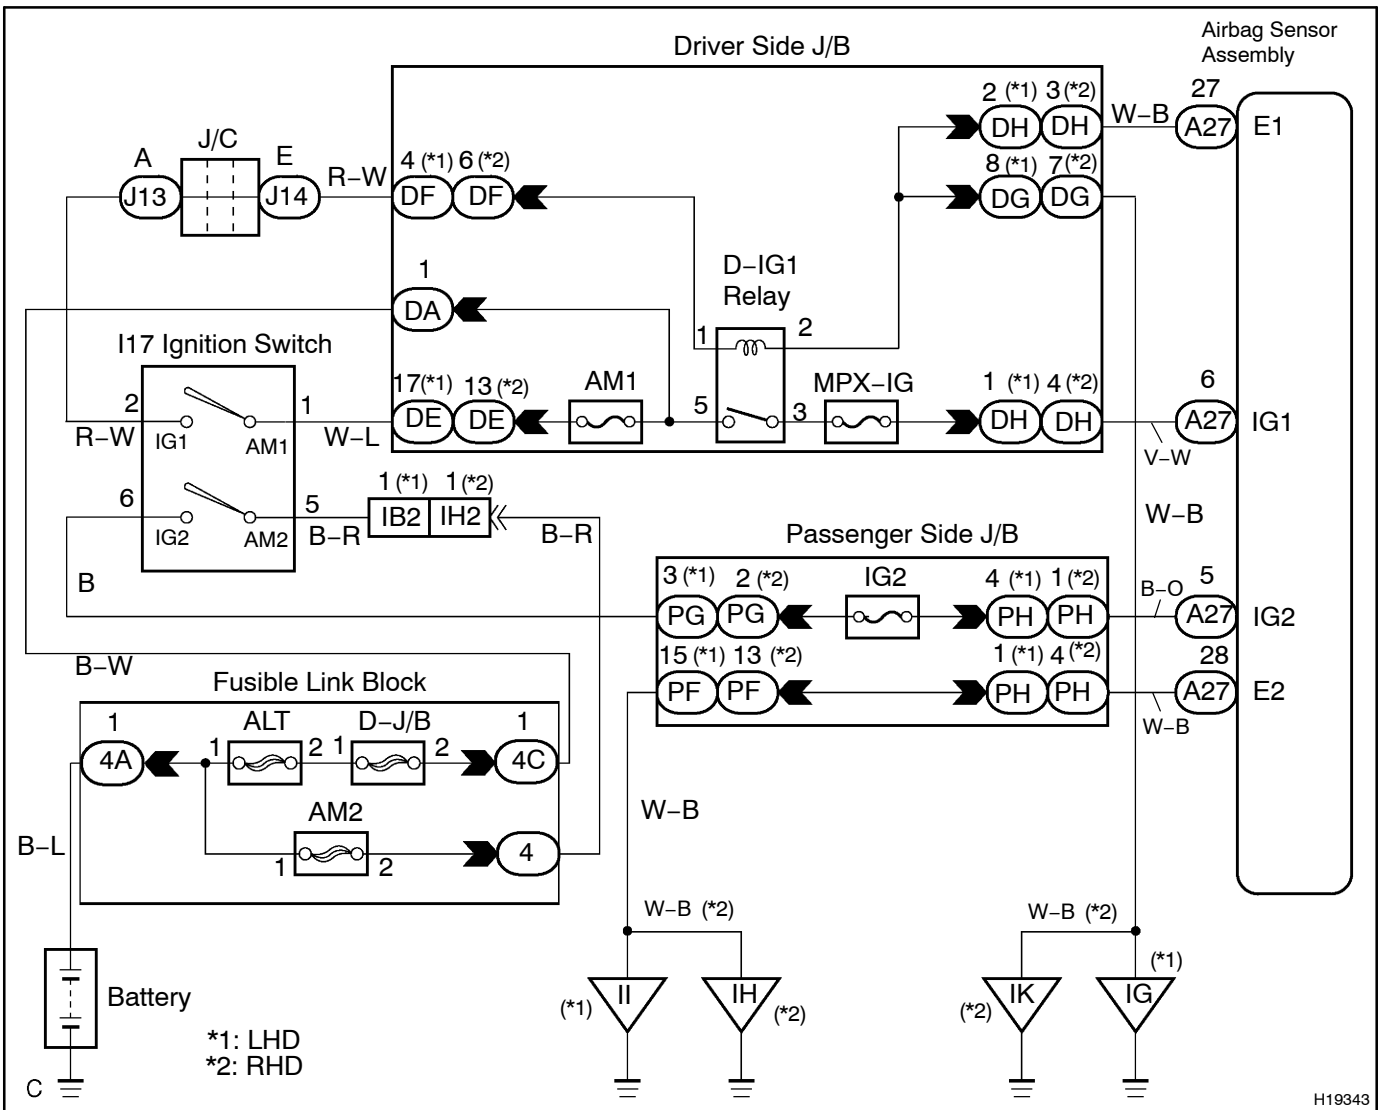

INSPECTION PROCEDURE

1	Prepare for inspection.
---	--------------------------------

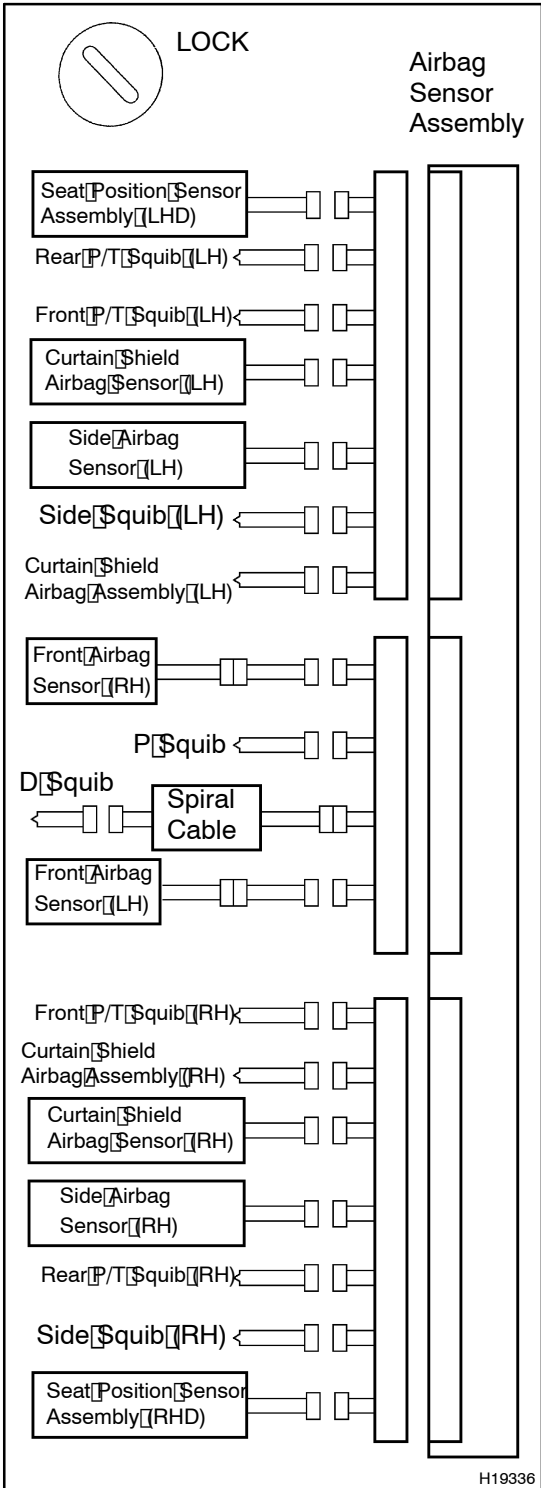


PREPARATION:


- (a) Disconnect negative (-) terminal cable from the battery, and wait at least for 90 seconds.
- (b) Remove the steering wheel pad (See page SR-4).
- (c) Disconnect the connector of the front passenger airbag assembly (See Pub. No. RM792E on page RS-29).
- (d) Disconnect the connector of the side airbag assembly (RH and LH) (See page RS-28).
- (e) Disconnect the connector of the curtain shield airbag assembly (RH and LH) (See page RS-33).
- (f) Disconnect the connector of the front seat belt pretensioner (RH and LH) (See Pub. No. RM792E on page BO-191).
- (g) Disconnect the connector of the rear seat belt pretensioner (RH and LH) (See Pub. No. RM792E on page BO-202).
- (h) Disconnect the connectors of the airbag sensor assembly (See Pub. No. RM792E on page RS-67).
- (i) Disconnect the connector of the front airbag sensor (RH and LH) (See Pub. No. RM792E on page RS-72).
- (j) Disconnect the connector of the side and curtain shield airbag sensor assembly (RH and LH) (See page RS-28).
- (k) Disconnect the connector of the curtain shield airbag sensor assembly (RH and LH) (See page RS-28).
- (l) Disconnect the connector of the seat position sensor assembly (See page RS-55).

CAUTION:

Store the steering wheel pad, front passenger airbag assembly, side airbag assembly and curtain shield airbag assembly with the front surface facing upward.

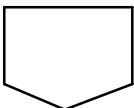

2 Check source voltage.

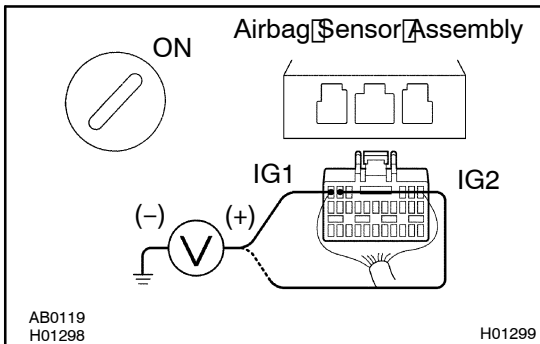

PREPARATION:

- Connect negative (-) terminal cable to the battery.
- Deactivate the LEXUS Link system (See page DI-1)

CHECK:

- Turn the ignition switch to ON.
- Measure the voltage between body ground and each of IG1 and IG2 on the sensor and operate electric system (defogger, wiper, headlight, heater blower, etc.).

OK:


Voltage: 10 – 14 V

NG

Check harness between battery and airbag sensor assembly, and check battery and charging system.

OK

3 Check resistance between body ground and each of E1 and E2 of the airbag sensor assembly connector.

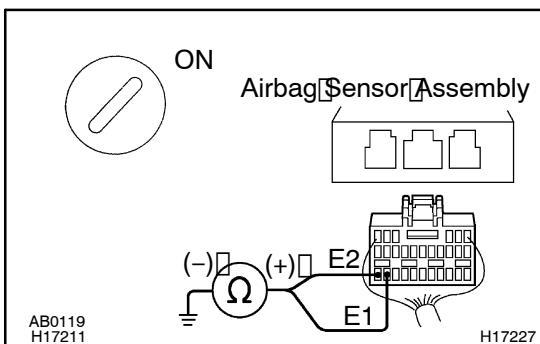

CHECK:

Measure the resistance of the airbag sensor assembly connector between body ground and each of E1 and E2.

OK:


Resistance: 0 Ω (Continuity)

NG

Repair or replace airbag sensor assembly connector.

OK

4	Does SRS warning light turn off?
----------	---

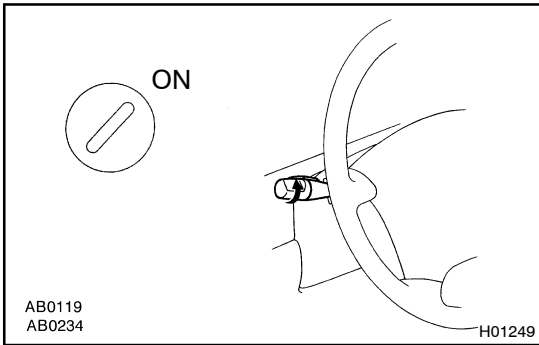**PREPARATION:**

- (a) Turn the ignition switch to LOCK.
- (b) Connect the steering wheel pad connector.
- (c) Connect the front passenger airbag assembly connector.
- (d) Connect the side airbag assembly connectors.
- (e) Connect the front seat belt pretensioner connectors.
- (f) Connect the rear seat belt pretensioner connectors.
- (g) Connect the airbag sensor assembly connectors.
- (h) Connect the front airbag sensor connectors.
- (i) Connect the side and curtain shield airbag sensor assembly connectors.
- (j) Connect the curtain shield airbag assembly connectors.
- (k) Connect the curtain shield airbag sensor assembly connectors.
- (l) Connect the seat position sensor assembly connector.
- (m) Turn the ignition switch to ON.

CHECK:

Operate electric system (defogger, wiper, headlight, heater blower, etc.) and check that SRS warning light goes off.

NO	Check for DTCs. If a DTC is output, perform troubleshooting for the DTC. If a normal code is output, replace airbag sensor assembly.
-----------	---

YES

From the results of the above inspection, the malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check.
--