DI2LK–03
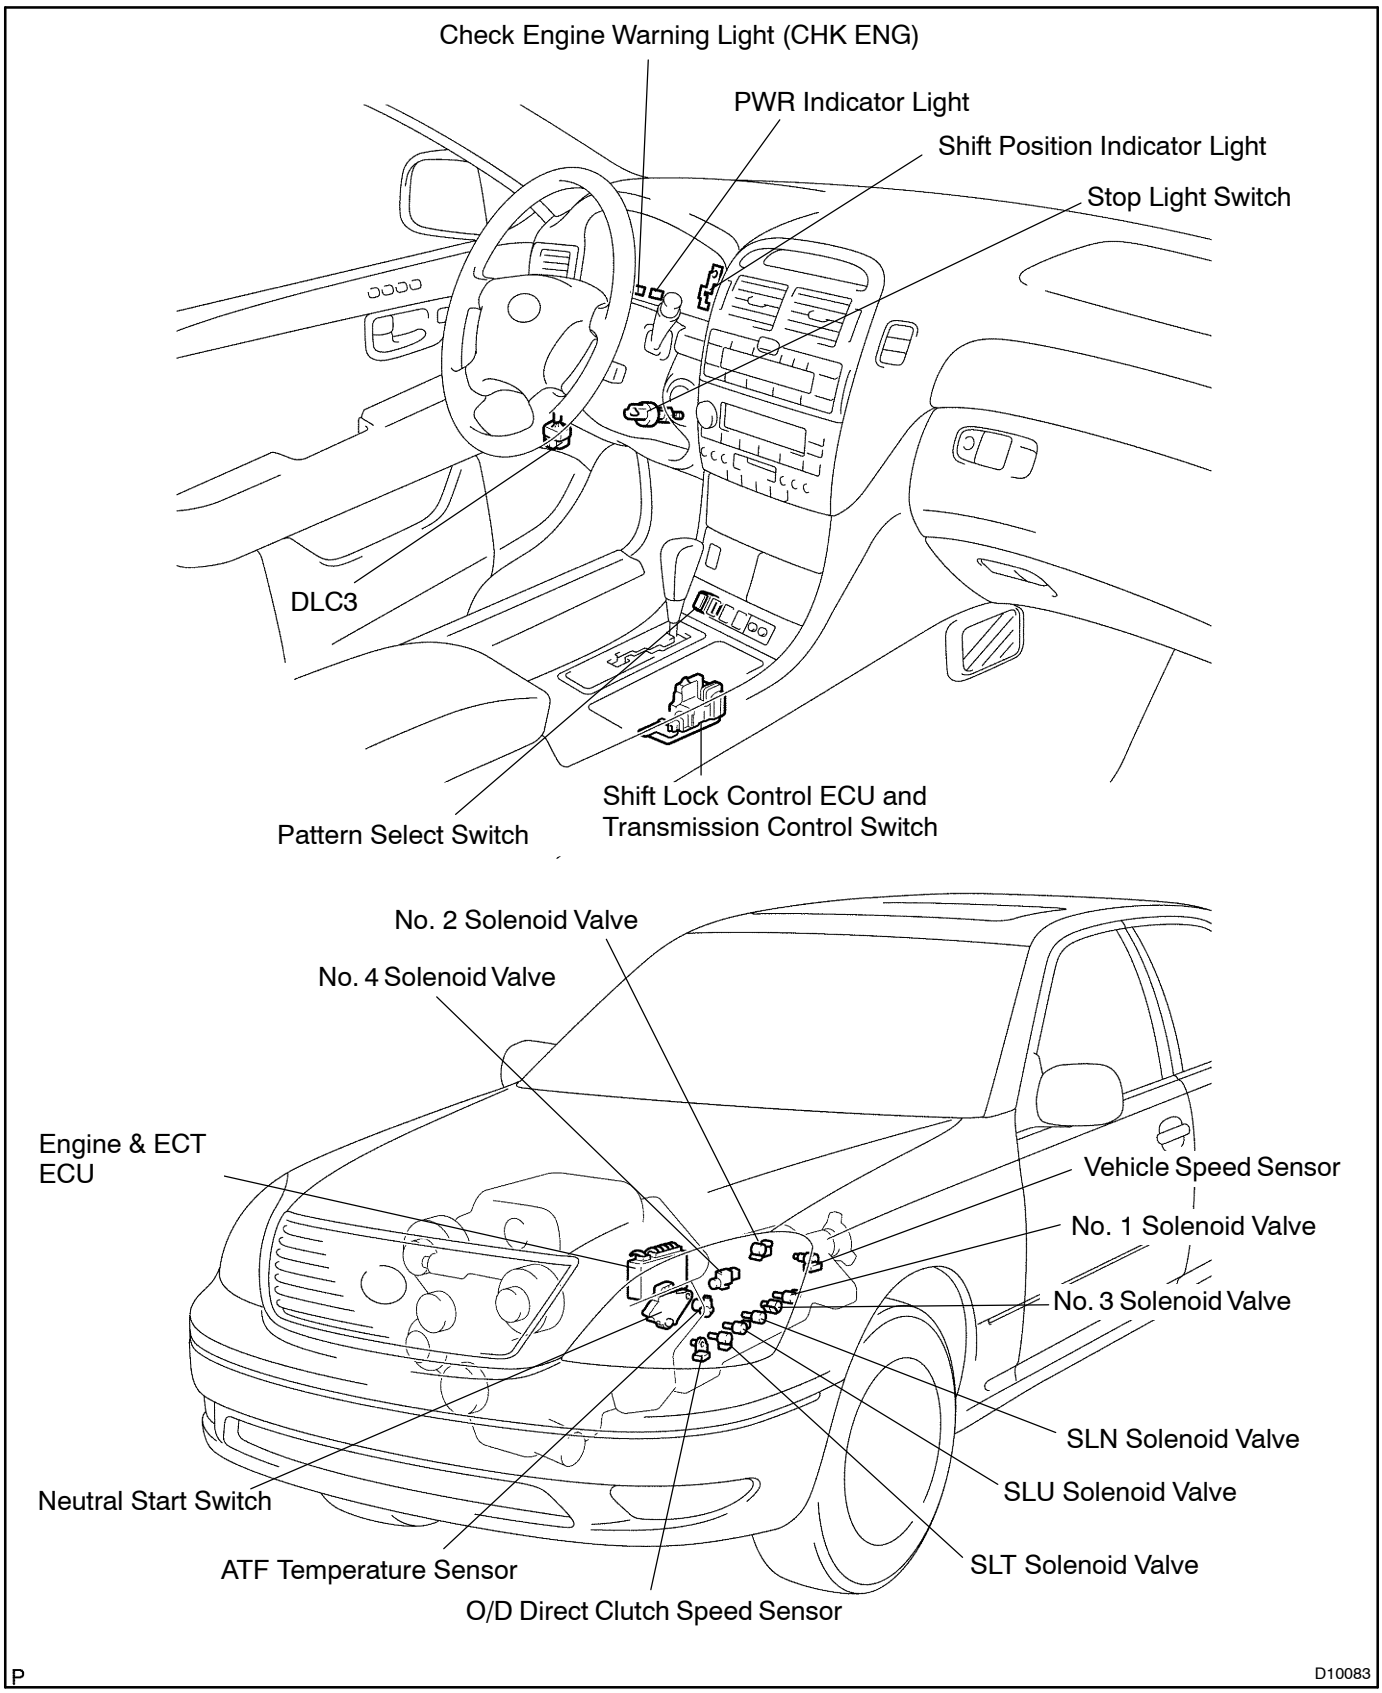
PARTS LOCATION