DI6P0–09
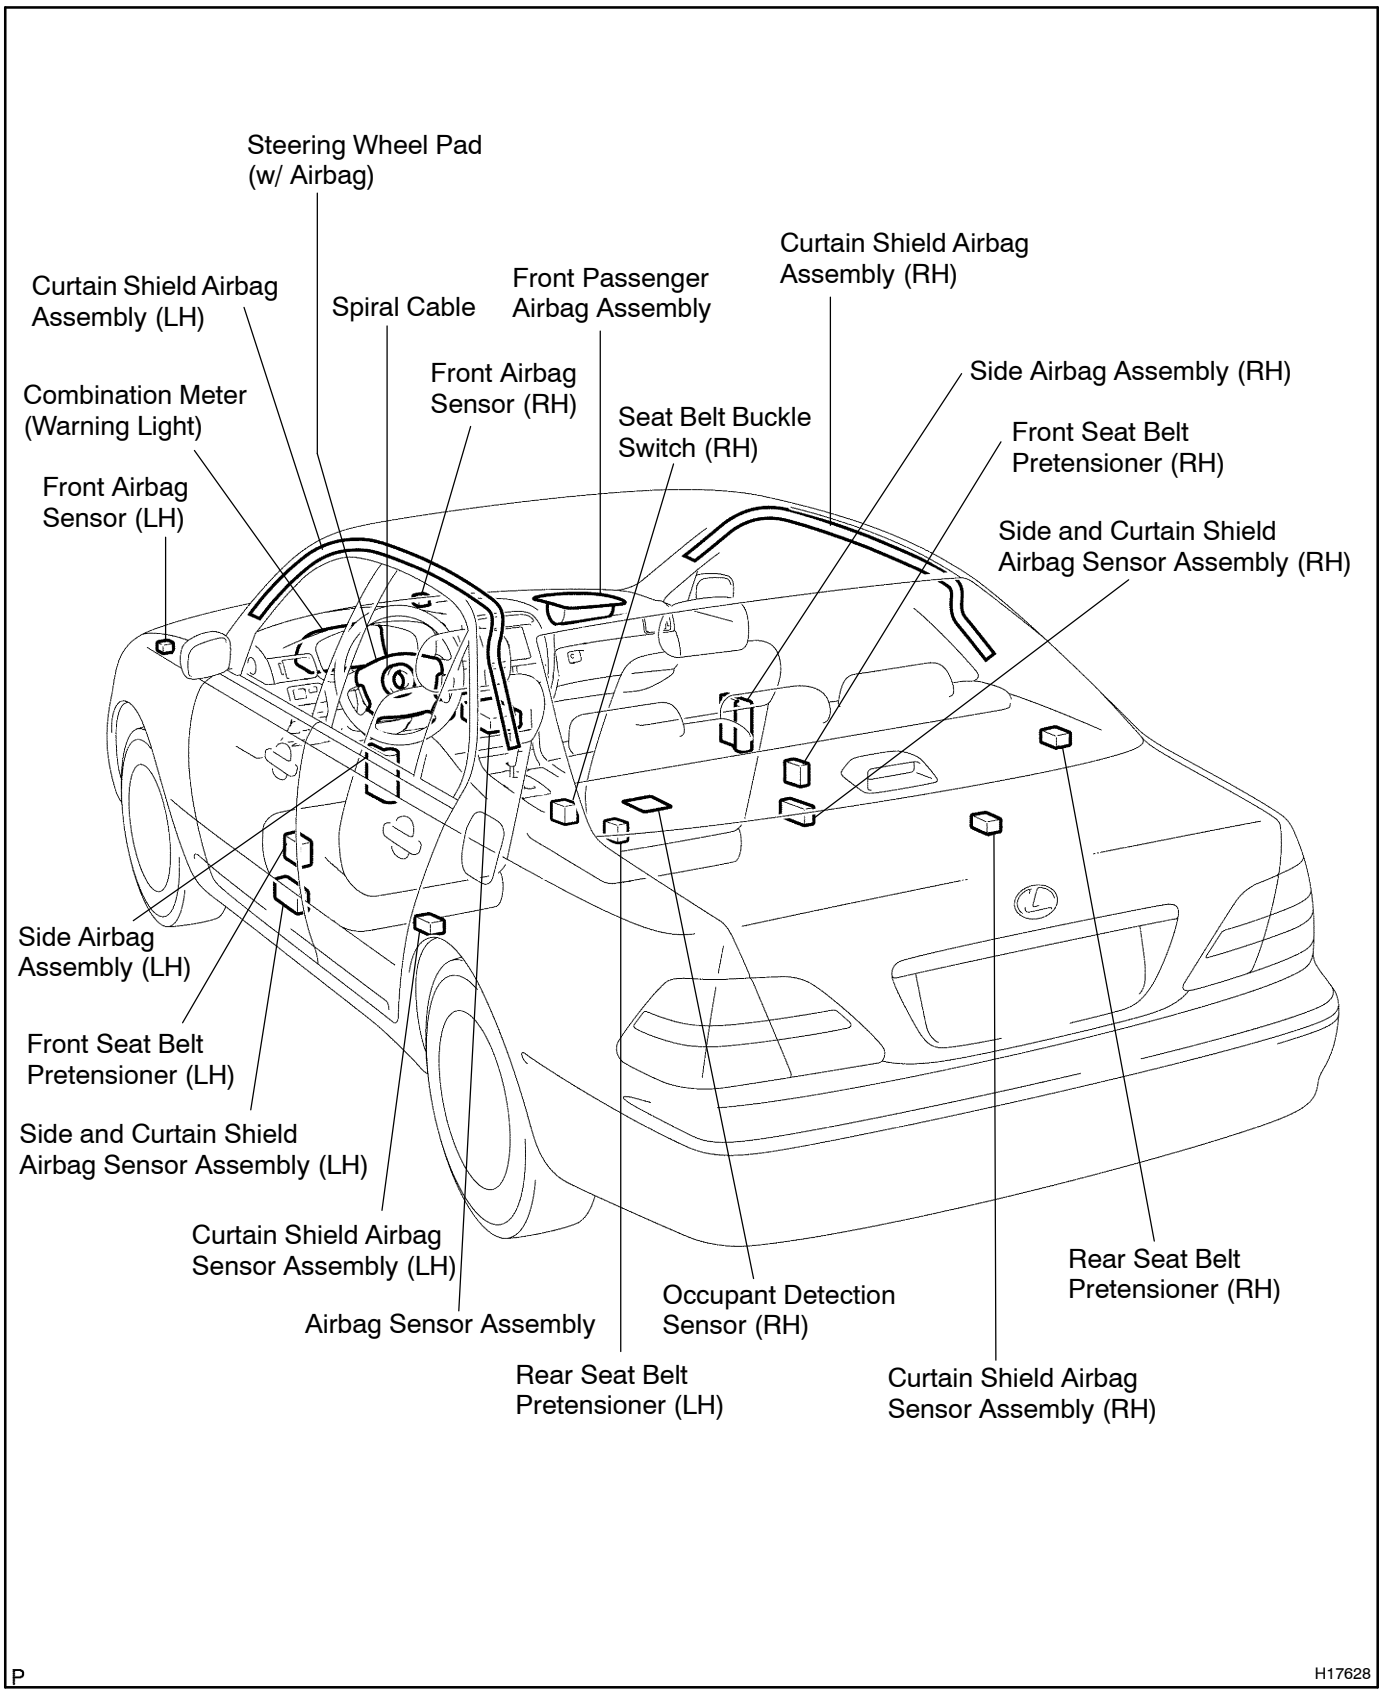
# PARTS LOCATION