DI8KB–01
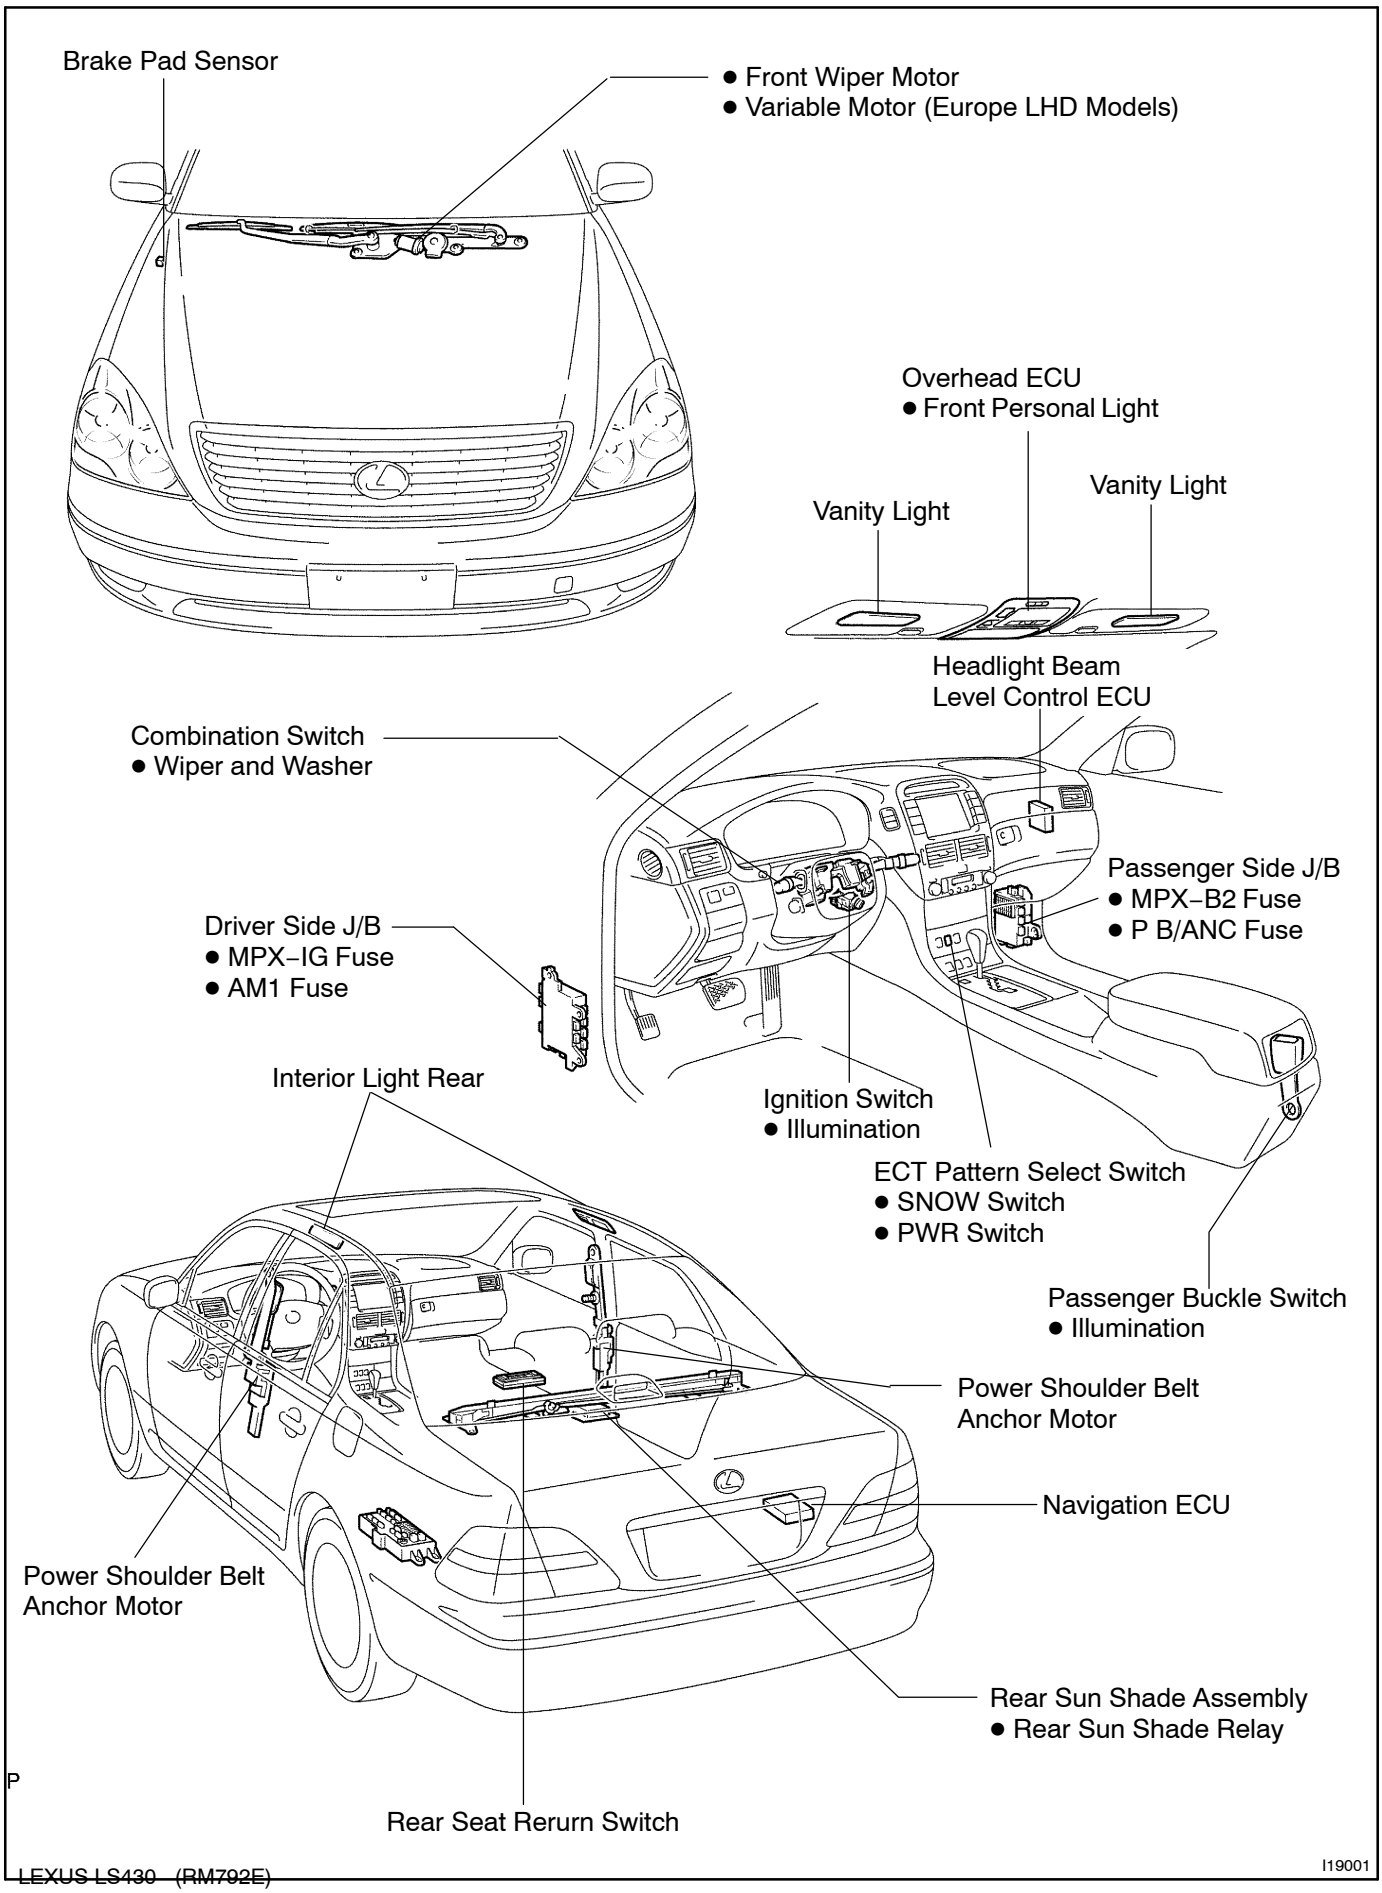
PARTS LOCATION