


## Smart Key System Cancel Switch Circuit

### WIRING DIAGRAM

w/ Smart Key System

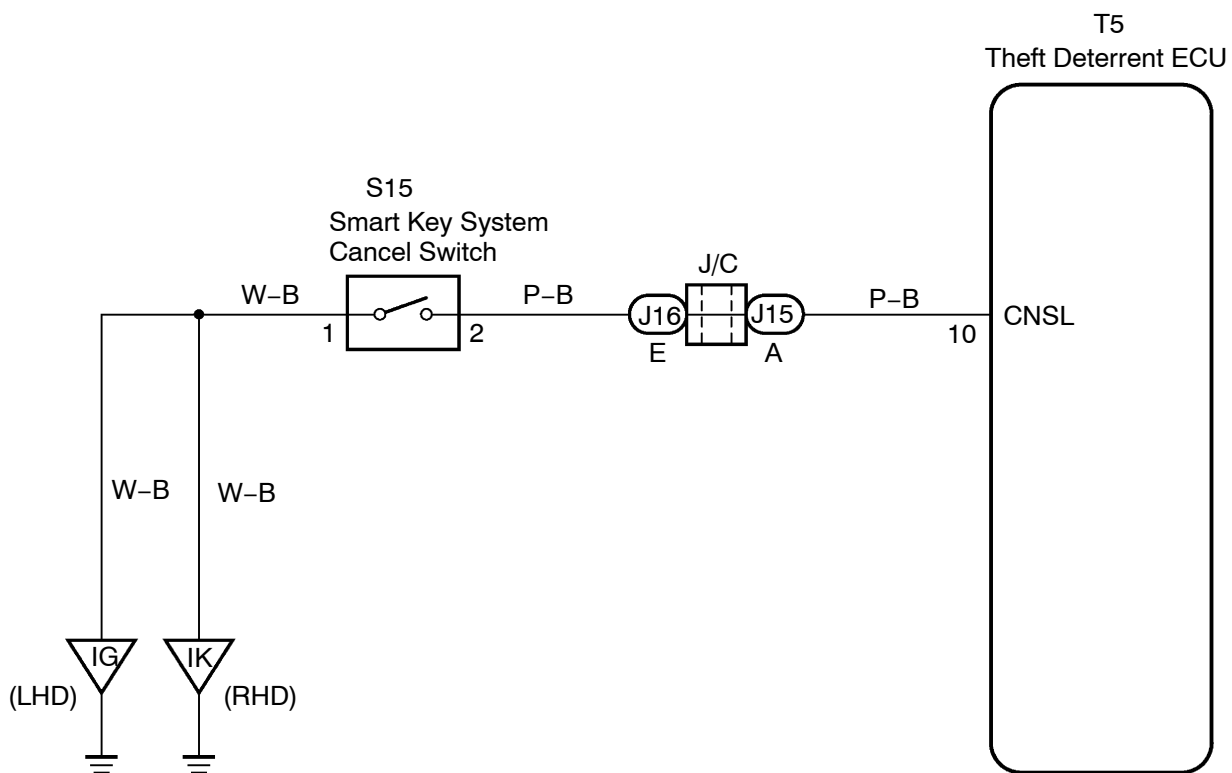

N

119885

**INSPECTION PROCEDURE****HINT:**

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

**1** Check smart key system cancel switch using hand-held tester.

**PREPARATION:**

Connect the LEXUS hand-held tester to the DLC3.

**CHECK:**

Check that the smart key system cancel switch can be operated in DATA LIST.

OK

Proceed to next circuit inspection shown in problem symptoms table (See page DI-810).

NG

**2** Check smart key system cancel switch (See page BE-121).

NG

Replace the smart key system cancel switch.

OK

**3** Check wire harness and connector between smart key system cancel switch and theft deterrent ECU (See page IN-35).

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.  
(See page DI-810)