

<b>DTC</b>	<b>P1780</b>	<b>Park/Neutral Position Switch Circuit (Neutral Start Switch)</b>
------------	--------------	--

## CIRCUIT DESCRIPTION

The neutral start switch detects the shift lever range and sends signals to the Engine & ECT ECU. The Engine & ECT ECU receives signals (P, R, N, D, 4, 3, 2 and L) from the neutral start switch. When the signal is not sent to the Engine & ECT ECU from the neutral start switch, the Engine & ECT ECU judges that the shift lever is in D range.

DTC No.	DTC Detection Condition	Trouble Area
P1780	2 or more switches are ON simultaneously for P, R, N, D, 4, 3, 2 and L ranges (2-trip detection logic).  When driving under conditions 1. and 2. for 30 seconds or more, the neutral start switch is ON (N position) (2-trip detection logic). 1. Vehicle speed: 70 km/h (44 mph) or more 2. Engine speed: 1,500 - 2,500 rpm	<ul style="list-style-type: none"> <li>• Short in neutral start switch circuit</li> <li>• Neutral start switch</li> <li>• Engine &amp; ECT ECU</li> </ul>



**INSPECTION PROCEDURE****HINT:**

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

**1** Read PNP, REVERSE, DRIVE, 4TH, 3RD, 2ND and LOW signals.

**PREPARATION:**

- (a) Remove the DLC3 cover.
- (b) Connect a hand-held tester to the DLC3.
- (c) Turn the ignition switch ON and hand-held tester main switch ON.

**CHECK:**

Shift lever into the P, R, N, D, 4, 3, 2 and L ranges, and read the PNP, REVERSE, DRIVE, 4TH, 3RD, 2ND and LOW signals on the hand-held tester.

**OK:**

Shift range	Signal
P/N	PNP: OFF → ON
R	REVERSE: OFF → ON
D	DRIVE: OFF → ON
4	4TH: OFF → ON
3	3RD: OFF → ON
2	2ND: OFF → ON
L	LOW: OFF → ON

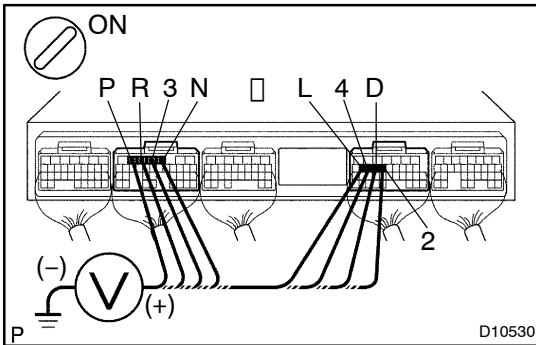
**OK**

**Check and replace the Engine & ECT ECU (See page N-35).**

**NG**

**Go to step 3.**

2 Measure voltage between each terminals of P, R, N, D, 4, 3, 2, and L of Engine & ECT ECU and body ground.

**PREPARATION:**

Turn the ignition switch ON.

**CHECK:**

Measure voltage between each terminals P, R, N, D, 4, 3, 2 and L of Engine & ECT ECU and body ground when the shift lever is shifted to the following positions.

**OK:**

Tester connection	Condition	Specified condition
P - Body ground	Shift lever range: P	Battery voltage
R - Body ground	Shift lever range: R	Battery voltage*
N - Body ground	Shift lever range: N	Battery voltage
D - Body ground	Shift lever range: D Transmission control SW (for D and 4) OFF	Battery voltage
4 - Body ground	Shift lever range: 4 Transmission control SW (for D and 4) ON	Battery voltage
3 - Body ground	Shift lever range: 3	Battery voltage
2 - Body ground	Shift lever range: 2 Transmission control SW (for 2 and L) OFF	Battery voltage
L - Body ground	Shift lever range: L Transmission control SW (for 2 and L) ON	Battery voltage

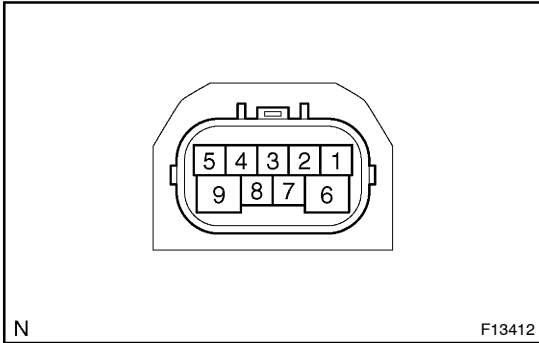
**HINT:**

\*: The voltage will drop slightly due to lighting up of the back up light.

OK

Check and replace the Engine & ECT ECU (See page N-35).

NG

**3** Check neutral start switch.**PREPARATION:**

- (a) Jack up the vehicle.  
 (b) Remove the neutral start switch connector.

**CHECK:**

Check continuity between each terminal shown below when the shift lever is moved to each range.

**OK:**

Shift range	Terminal No. to continuity	Terminal No. to continuity
P	1 - 3	6 - 9
R	2 - 3	-
N	3 - 5	6 - 9
D, 4	3 - 7	-
3	3 - 7	-
2, L	3 - 8	-

**NG****Replace the neutral start switch.****OK**

**Repair or replace harness and connector between battery and neutral start switch, neutral start switch and Engine & ECT ECU (See page IN-35).**