


DTC	B2611	Telescopic Position Sensor or Telescopic Motor Circuit Malfunction
------------	--------------	---

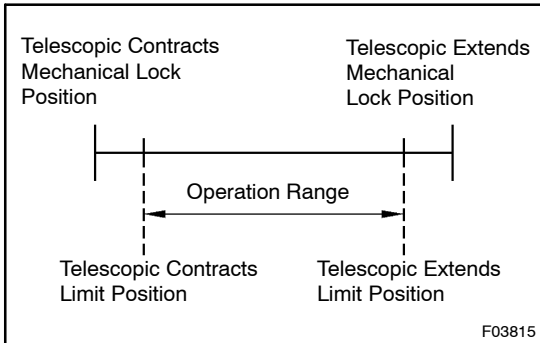

CIRCUIT DESCRIPTION


Telescopic motor is operated by the power voltage supplied from power tilt and power telescopic ECU and makes the steering column slide forward and rearward. Telescopic position sensor (Hole IC) in the telescopic motor detects the sliding position of the forward and rearward direction of the steering column and outputs the signal to the CPU in response to that sliding amount.

HINT:

Limit positions can be confirmed on the screen of the hand-held tester.

DTC No.	DTC Detecting Condition	Trouble Area
B2611	During telescopic function operation, telescopic operation stops within the operation range.	<ul style="list-style-type: none"> • Sensor power source circuit • Actuator power source circuit • Telescopic motor circuit • Power tilt and power telescopic ECU

WIRING DIAGRAM

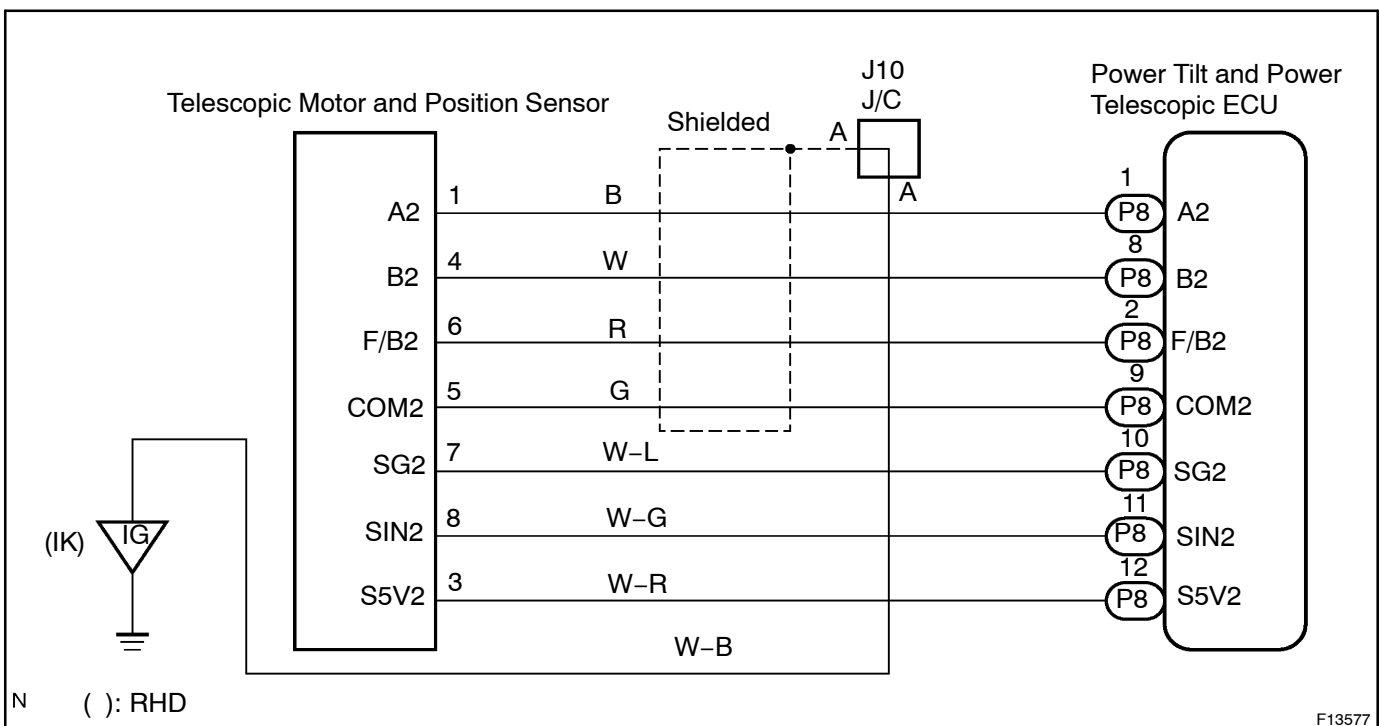

INSPECTION PROCEDURE

1 Check sensor power source circuit (See page DI-476).

NG

Repair or replace malfunction part.

OK

2 Check actuator power source circuit (See page DI-474).

NG

Repair or replace malfunction part.

OK

3 Check telescopic motor circuit (See page DI-480).

NG

Repair or replace malfunction part.

OK

Check and replace the power tilt and power telescopic ECU.