

<b>DTC</b>	<b>B1299</b>	<b>Rear LH seat ECU communication stop</b>
------------	--------------	--

## CIRCUIT DESCRIPTION

This DTC is output when communication stops between the rear LH seat ECU and the gateway ECU.

DTC No.	DTC Detecting Condition	Trouble Area
B1299	No communication from rear LH seat ECU for more than 10 seconds.	<ul style="list-style-type: none"> <li>• Rear LH seat ECU</li> <li>• Wire harness</li> </ul>

## WIRING DIAGRAM

See [page DI-1482](#).

## INSPECTION PROCEDURE

<b>1</b>	<b>Check wire harness</b>
----------	---------------------------

### PREPARATION:

Pull out the ECU connectors mentioned below.

### LHD:


Wire harness side connector of ECU	Terminal
Rear LH seat ECU - Transponder key ECU (w/o Smart key system)	MPX (R27-7) - MPX1 (T9-4)
Rear LH seat ECU - Steering lock ECU (w/ Smart key system)	MPX (R27-7) - MPX1 (S17-15)

### RHD:

Wire harness side connector of ECU	Terminal
Rear LH seat ECU - Gateway ECU	MPX (R27-7) - MPD2 (G1-15)

### CHECK:

Check continuity of the wire harness between the connectors.

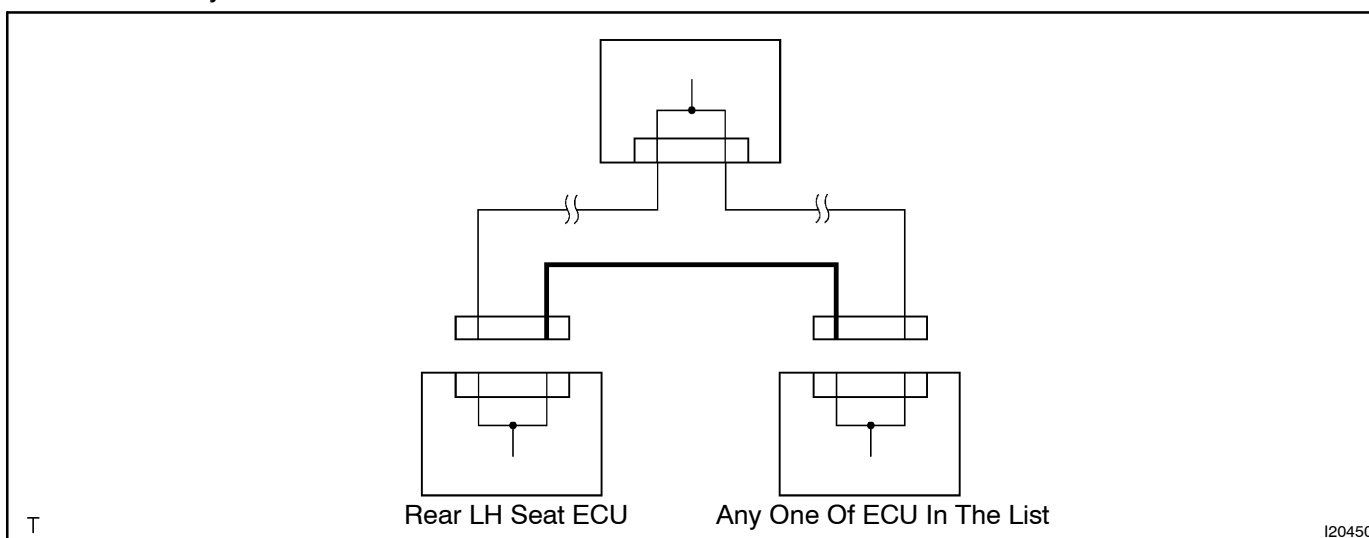

### OK:


**There is a continuity between the connectors.**

### HINT:

If there is OPEN in any wire harness, please repair it.



Repair or replace wire harness.



Replace rear LH seat ECU (See page IN-35).