


Cruise Control Switch Circuit

CIRCUIT DESCRIPTION

This circuit carries the SET/COAST, RESUME/ACCEL and CANCEL voltage signals to the ECU.

WIRING DIAGRAM

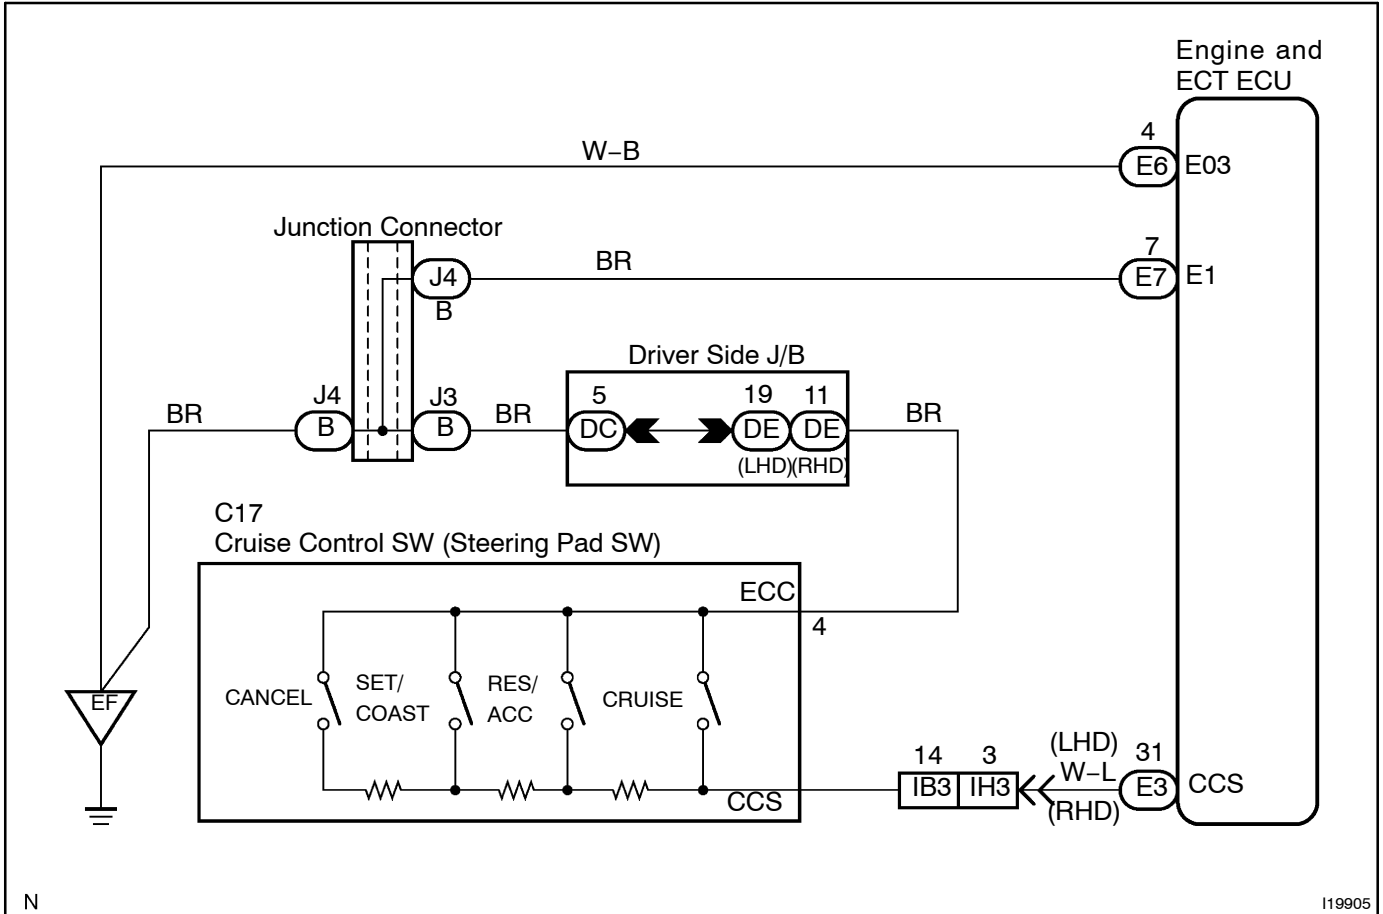

INSPECTION PROCEDURE

HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

1 Check cruise control switch using LEXUS hand-held tester.

PREPARATION:

Connect the LEXUS hand-held tester to the DLC3.

CHECK:


Check the cruise control switch using DATA LIST.

OK

Proceed to next circuit inspection shown on problem symptom table (See page DI-862).

NG

2 Check voltage between terminals CCS of Engine and ECT ECU connector and body ground.

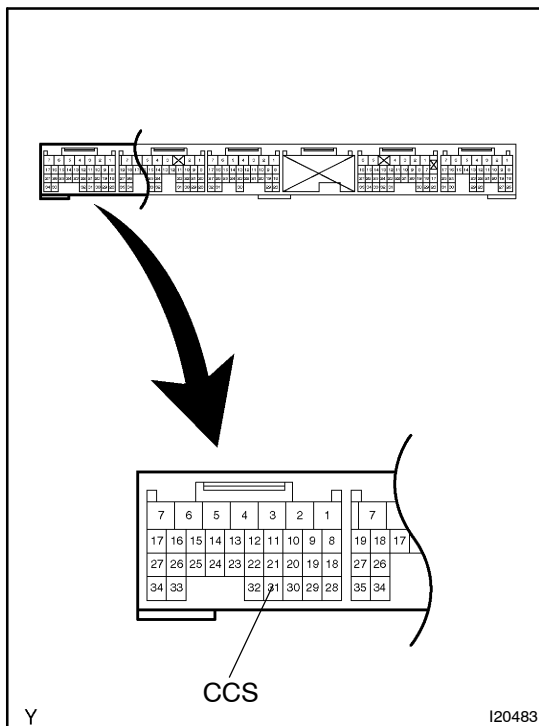

PREPARATION:

- Remove the Engine and ECT ECU with the connector still connected.
- Turn the ignition switch ON.

CHECK:


Measure voltage between terminals CCS of Engine and ECT ECU connector and body ground, when each of the SET/COAST, RESUME/ACCEL and CANCEL is turned ON.

Switch position	Resistance (V)
Neutral	10 - 16V
RES/ACC	2.4 - 3.8V
SET/COAST	4.7 - 6.9V
CANCEL	6.9 - 9.8V

NG

Proceed to next circuit inspection shown in problem symptoms table (See page DI-862).

OK

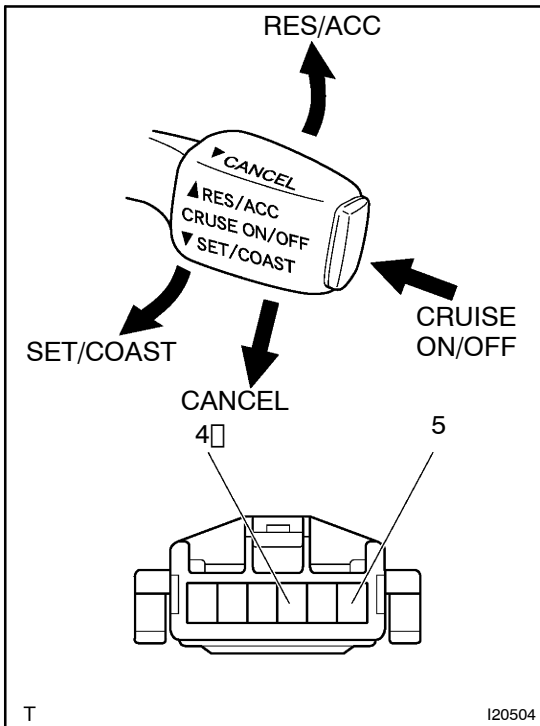3 Check control switch continuity.**PREPARATION:**

- (a) Remove the steering wheel center pad.
- (b) Disconnect the control switch connector.

CHECK:

Measure resistance between terminals 4 and 5 of the control switch connector when the control switch is operated.

Switch position	Resistance (Ω)
Neutral	∞ (No continuity)
CRUISE	0 (Continuity)
RES/ACC	220 - 260
SET/COAST	600 - 660
CANCEL	1,500 - 1,600

NG

Replace control switch.

OK

4 Check harness and connector between Engine and ECT ECU and cruise control switch, cruise control switch and body ground (See page IN-35).

NG

Repair or replace harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-862).